 
 


## Language Settings:

 
As the default setting on the CS-250 is German, follow steps 1 - 2 to enter programming mode. Once 'INPUT - DEUTSCH' is shown, push 'P' and 'DEUTSCH' will flash. Use the '+' to change to 'ENGLISH' and push 'P' to save. Hold down '+' & '-' to exit the 'INPUT' menu and then follow step 5 - 6.

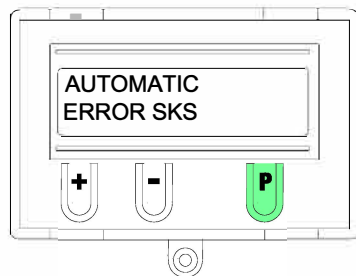


**Step 1 .:-** From the menu screen push down and hold 'P', until you reach 'INPUT'.

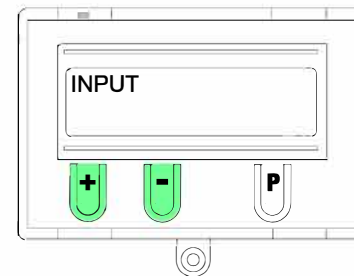


**Step 2 .:-** Once you have scrolled to 'INPUT' push down and hold both '+' & '-'

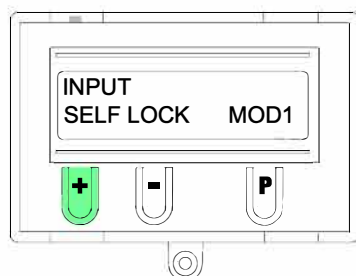

 
**Step 3 .:-** The language parameter is the first setting to appear. Scroll through by pushing on the '+' button until 'SELF LOCK - MOD1' appears.

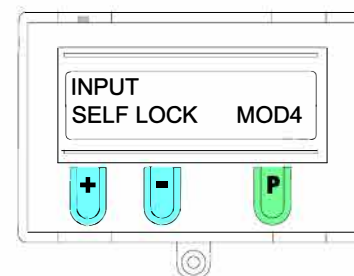

 **Step 4 .:-** Push 'P' once - 'MOD1' will flash. Now push the '+' button to scroll through to 'MOD4' and push 'P' to save the new setting. Hold down '+' & '-' to exit the 'INPUT' menu.

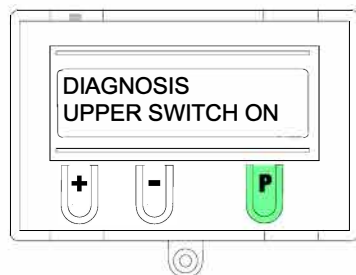

 **Step 5 .:-** Push and hold 'P' until 'MANUAL' is shown.

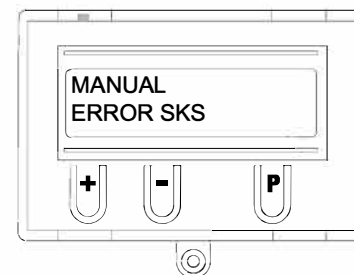

**Step 6 .:-** The LCD screen should now show 'MANUAL - ERROR SKS'. This means that the CS-250 has successfully been programmed for deadman operation.

### Key

- Primary Action
- Secondary Action

Please refer to LC-3052 for CS-250 Quick Start Guide

Please refer to LC-3056 for CS-250 Full Instructions

Title:-

CS-250 Instructions -  
Changing & Setting the Control Panel from Automatic to Deadman Operation

Drawing No:- LC-3161

Page No:- 1 of 1

Revision No:- A

Rev Date:- 25/01/17

Drawn By:- C.J.W.

Date:- 20/01/17

Checked By:- A.M.

Appr' By:- R.B.