
## Hinge position

Always fit the hinge at the top of the groove! If you fit as a pair, make sure your mate does the same. If all hinges are not aligned, hinge noise, creaking and popping will be the result!

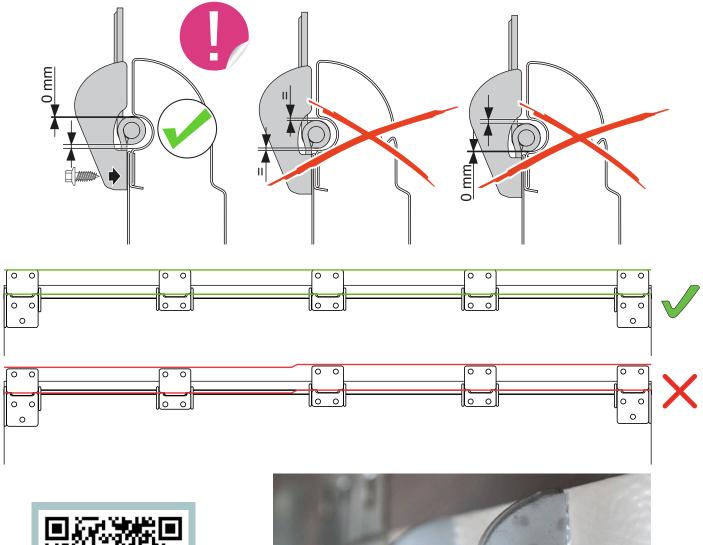



Have a question?





t: 01925 924 050 e: sales@teckentrup.co.uk

