


# CARTECK SECTIONAL DOOR XL

## Instruction Manual

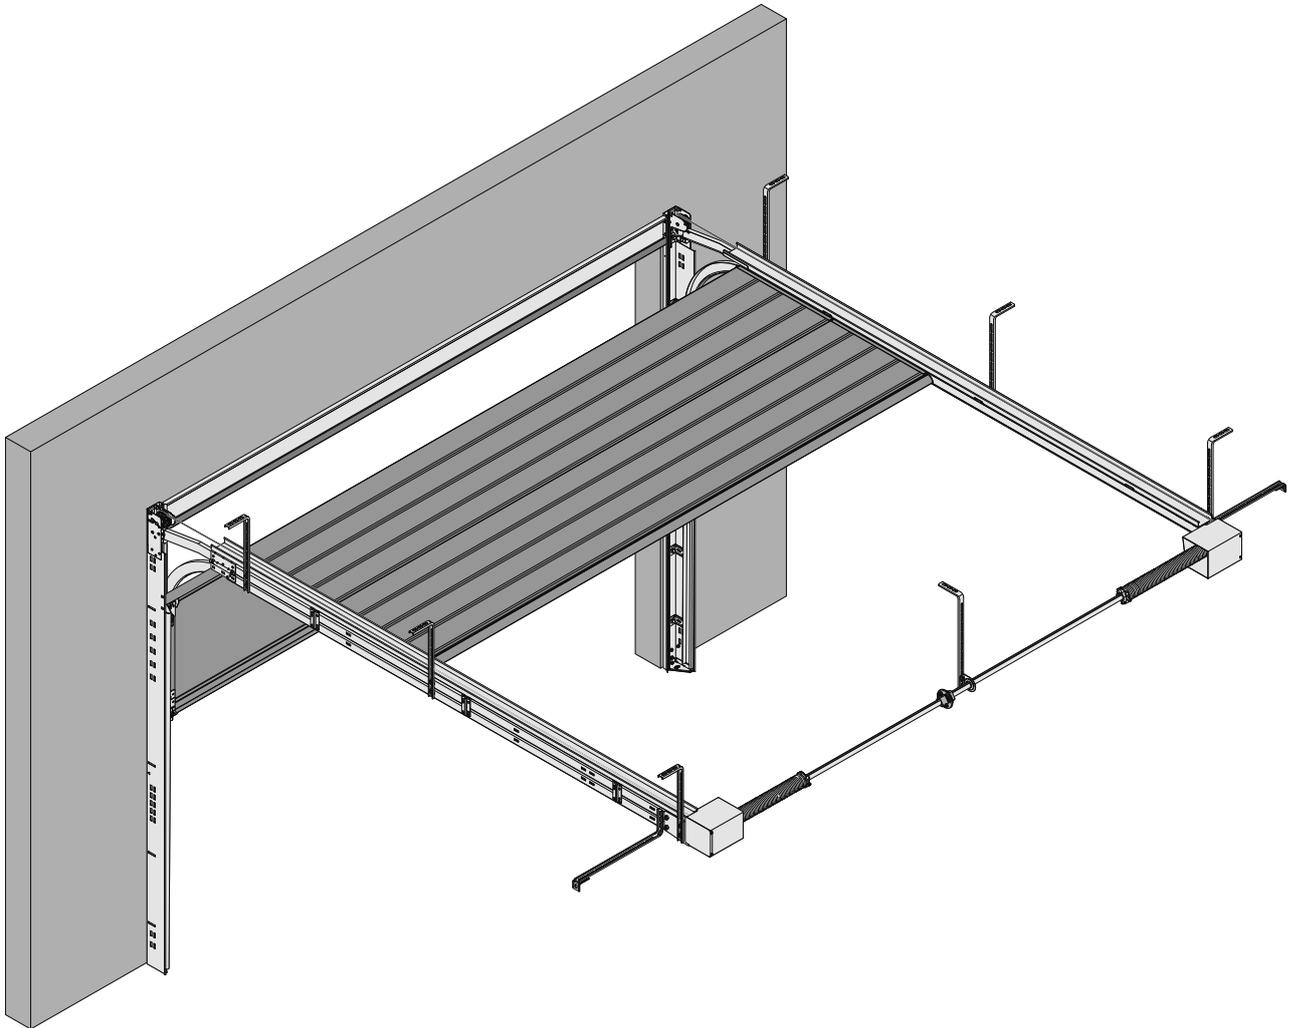

## Document information

Manual for:  
Carteck sectional door XL

- Original manual.
- Part of the product.
- Protected by copyright.
- Reprinting, even in excerpts, is only permitted with our prior consent.

## Safety information

### **WARNING!**

Notices with the word **WARNING** warn of a dangerous situation that can result in death or severe injuries.

### **CAUTION!**

Notices with the word **CAUTION** warn of a situation that can result in minor or moderate injuries.


### **NOTE!**

Notices with the word **ATTENTION** warn of a situation that can result in property damage or environmental pollution.

## Explanation of symbols in text

- ↪ Call to action
- List
- ☑ Check
- 📄 Reference to other parts of this document or other documents that must be observed

## Explanation of symbols in figures

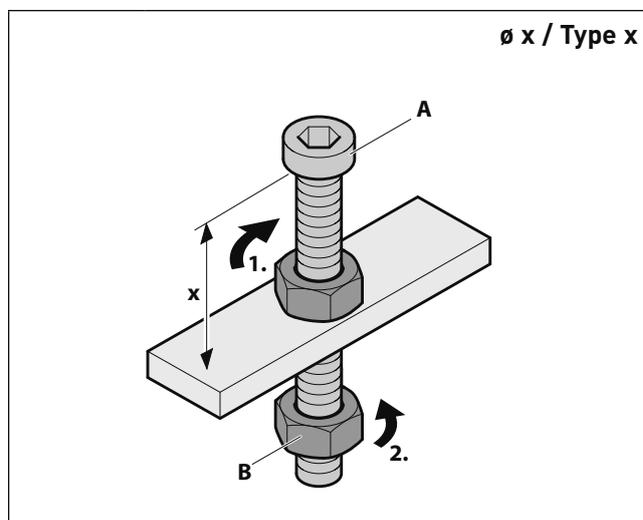

- Accentuation of action parts
- 1. Numbered action steps
- A Part names with capital letters
- x Dimensions with lower-case letters or units in mm
- ↪ Arrows indicating movement and direction
- Type** Screw type according to the overview of screws
- ∅ Hole diameter specification

## Table of contents

|   |           |  |           |
|---|-----------|--|-----------|
| <b>1. Safety information</b> . . . . .  | <b>4</b>  | <b>8. Disassembly and disposal</b> . . . . . | <b>42</b> |
| 1.1 Intended use . . . . .  | 4         | 8.1 Disassembly . . . . .                    | 42        |
| 1.2 Authorised target groups . . . . .  | 4         | 8.2 Disposal . . . . .                       | 42        |
| 1.3 General safety information . . . . .  | 4         | <b>9. Annex</b> . . . . .                    | <b>43</b> |
| <b>2. Product information</b> . . . . .   | <b>5</b>  | 9.1 Warranty . . . . .                       | 43        |
| 2.1 Explanation of the colouring of CarTeck sectional doors . . . . .                                   | 5         |  |           |
| 2.2 Scope of delivery . . . . .   | 5         |  |           |
| 2.3 Overview of screws . . . . .  | 6         |  |           |
| <b>3. Assembly</b> . . . . .  | <b>7</b>  |  |           |
| 3.1 Requirements on the installation location . . . . .   | 7         |  |           |
| 3.2 Required tools (not included in the scope of delivery) . . . . .                                    | 7         |  |           |
| 3.3 Control measurement . . . . .   | 8         |  |           |
| 3.4 Reference level specification . . . . .   | 9         |  |           |
| 3.5 Lintel casing installation . . . . .  | 9         |  |           |
| 3.6 Frame setup . . . . .   | 10        |  |           |
| 3.7 Frame alignment and fixing . . . . .  | 11        |  |           |
| 3.8 Fastening the frame (installation in front of the reveal) . . . . .                                 | 12        |  |           |
| 3.9 Installing the lintel casing . . . . .  | 15        |  |           |
| 3.10 Assembly of the guide rails on the frame . . . . .   | 16        |  |           |
| 3.11 Installing the torsion spring shaft . . . . .  | 17        |  |           |
| 3.12 Fastening the upper guide rails . . . . .  | 20        |  |           |
| 3.13 Assembly of the guide rails on the ceiling . . . . .   | 20        |  |           |
| 3.14 Assembly of the door sections . . . . .  | 25        |  |           |
| 3.15 Installing the cable pulls on the door leaf . . . . .  | 34        |  |           |
| 3.16 Tension springs . . . . .  | 35        |  |           |
| 3.17 Test door travel . . . . .   | 36        |  |           |
| 3.18 Door carrier assembly . . . . .  | 38        |  |           |
| <b>4. Commissioning</b> . . . . .   | <b>39</b> |  |           |
| 4.1 Safety instructions for commissioning . . . . .   | 39        |  |           |
| 4.2 Testing the door operation . . . . .  | 39        |  |           |
| 4.3 Remove protective film . . . . .  | 39        |  |           |
| <b>5. Operation</b> . . . . .   | <b>40</b> |  |           |
| 5.1 Safety instructions for operation . . . . .   | 40        |  |           |
| 5.2 Manually operated doors . . . . .   | 40        |  |           |
| 5.3 Power-operated doors . . . . .  | 40        |  |           |
| <b>6. Cleaning</b> . . . . .  | <b>41</b> |  |           |
| <b>7. Service</b> . . . . .   | <b>41</b> |  |           |
| 7.1 Maintenance work by the owner . . . . .   | 41        |  |           |
| 7.2 Maintenance work by qualified, trained specialist personnel (in accordance with EN 12635) . . . . . | 41        |  |           |

## 1. Safety information

### 1.1 Intended use

- This garage door is intended exclusively for private use (approx. 1000 cycles / year).
- Continuous operation is not permitted.

### 1.2 Authorised target groups

- Assembly, connection, commissioning and disassembly:  
qualified, trained specialist personnel.
- Operation, testing, and maintenance:  
Owner of the door system.

Requirements for qualified and trained specialist personnel:

- Knowledge of the general and special safety and accident prevention regulations.
- Knowledge of the applicable electrical engineering regulations.
- Training in the use and upkeep of appropriate safety equipment.
- Adequate instruction and supervision by electricians.
- Capability of recognising dangers which can be caused by electricity.
- Skill in the application of the following standards
  - EN 12635 ("Industrial, commercial and garage doors and gates. Installation and use"),
  - EN 12453 ("Industrial, commercial and garage doors and gates. Safety in use of power operated doors. Requirements"),
  - EN 12445 ("Industrial, commercial and garage doors and gates. Safety in use of power operated doors. Test methods").

Requirements for the owner of the door system:

- Familiarity with and safekeeping of the operating manual.
- Knowledge of the general safety and accident prevention regulations.

Special requirements apply for the following users:

- Children ages 8 and older.
  - Persons with reduced physical, sensory, or mental capabilities.
  - Persons lacking in experience and knowledge.
- These users may only be involved in the operation of doors.

Special requirements:

- Users are supervised.
- Users have been instructed with regard to the safe use of the equipment.
- Users understand the dangers involved with the equipment.
- Children must not play with the equipment.

### 1.3 General safety information

Keep this manual safe for future reference!

Please read and observe this manual! It provides you with important information about the safe installation and operation of the sectional garage door. The proper care and maintenance of your door is also described here so that you can benefit from this product for many years to come.



#### **WARNING!**

- Installation may only be carried out by a qualified expert in accordance with EN 12635.
  - For your own safety, you must carry out the installation steps in the sequence specified in this manual.
  - Only assemble the door on foundations with the appropriate structural support.
-

## 2. Product information

### 2.1 Explanation of the colouring of CarTeck sectional doors

#### Possible deformation from solar radiation

Thermally insulated sectional doors having foam panels consisting of an outer and inner skin (steel sheet) are subject to an elevated level stress during the summer months in particular.

A significantly higher temperature arises on the outside of the door leaf than on the inside due to direct solar radiation.

Therefore, the outer skin of the panel expands significantly more than the inner skin, which can result in temporary deformation of the door leaf.

This effect occurs especially with very dark colours.

In general, the following applies: The lighter the colour, the less the deformation.

Exceptions are metallic, pearlescent and fluorescent colours, which can heat up significantly with lighter colours.

The same applies for film-coated doors in faux wood décor, such as dark oak, mahogany, etc.

In addition, the deformation increases as the width of the door increases.

Therefore, the surface of door systems in dark colours will never be completely level.

The panels are produced at the factory to counteract any deformation.

#### Planning

We recommend taking this into consideration when planning the door system.

If the door system is exposed to direct solar radiation, a pronounced deformation of the panels must be taken into account, depending on the type and design of the door.

#### Remedy for thermal deformation

Reinforcement profiles on the panels do not usually provide the desired effect and reduce the passage height.

In order to avoid deformation due to direct solar radiation, the "Special bracket for sectional doors" (Article number 138 144) can be used with the 120 series fitting.

In this connection, the top rollers must be positioned in the same manner as with manually operated doors. As a result, the top roller is in the vertical curved rail when the door is closed and counteracts deformation. With the 240 series fitting, the top rollers must always be positioned in the same manner as with manually operated doors.

It must also be ensured that distance between the door leaf and drive rail is not at the minimal end of the range in order to avoid damage to the door leaf. The indicated measures can positively influence the effects, but not eliminate them entirely.

#### Informing end customers


The end customer must always be informed of the problem and any measures must be coordinated with them ahead of time.

The customer must also be informed that deformation of the door must be taken into consideration with the aforementioned door colours and intense solar radiation and that this is not a defect.



### 2.2 Scope of delivery

- Door leaf package
- Frame package
- Accessory package



**2.3 Overview of screws**

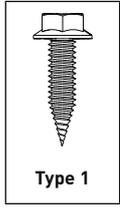


Type 1:  
Screw 6.3 x 16

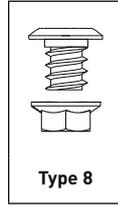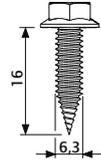



Type 8:  
Screw M8 x 13

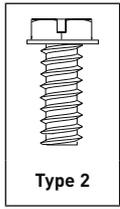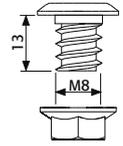



Type 2:  
Screw 4.2 x 13

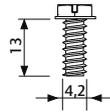



Type 9:  
Screw 6.5 x 25

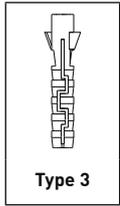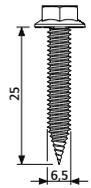



Type 3:  
Anchor

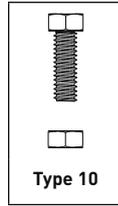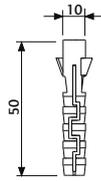



Type 10:  
Screw M8 x 30

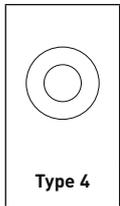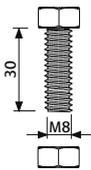



Type 4:  
Washer 8 x 19

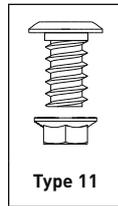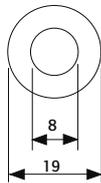



Type 11:  
Screw M6 x 16

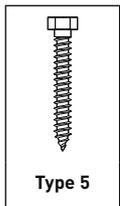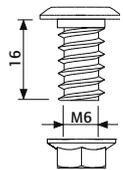



Type 5:  
Screw 8 x 60

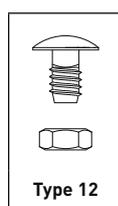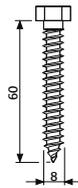



Type 12:  
Screw M10 x 20

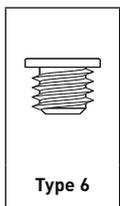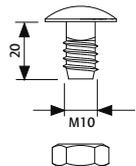



Type 6:  
BN 9524  
Screw M8 x 8 / X25

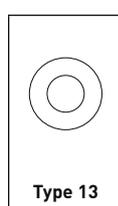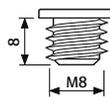


Type 13:  
Washer 10,5 x 20

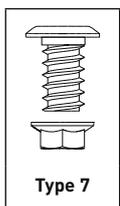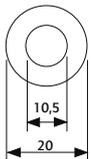

Type 7:  
Screw M8 x 16

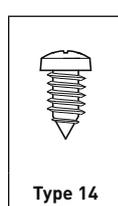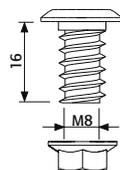

Type 14:  
Screw 4,8 x 13

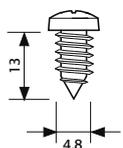

### 3. Assembly

#### 3.1 Requirements on the installation location

- ↔ Please ensure the following for the installation location:
  - the floor is completed at the finished height,
  - the walls and ceiling are plastered.

In order to eliminate the risk of corrosion:

- ↔ Assure that water drains sufficiently from the outside area in front of the door seal and frame parts! If necessary, plan an incline for drainage!
- ↔ Ensure that there is adequate drying and/or ventilation of the hall!
- ↔ Protect the door from aggressive and corrosive media, such as saltpetre reactions from stone and mortar, acids, alkali, road salt, aggressive varnishes or sealants!
- ↔ The door must be covered prior to any plastering or paintwork, because splatter from mortar, cement, gypsum or paint can damage the surface.

#### 3.2 Required tools (not included in the scope of delivery)

- Two wooden trusses or other means of support
- Drill
- Drill bit
- Torx T-25
- 4 mm Allen wrench
- 8 mm Allen wrench
- AF 13 socket wrench
- AF 10 spanner
- AF 13 spanner
- AF 17 spanner
- Clamps
- Suitable anchors for the specific installation situation: Aerated concrete
- Screwdriver
- Metal saw
- Pliers
- Protective goggles
- Screw clamps
- Ladder or assembly scaffolding
- Spirit level
- Hose spirit level for reference level specification
- Measuring tape
- Work gloves

### 3.3 Control measurement

#### NOTE!


⇨ Before beginning with installation, check whether the delivered door is suitable for the installation situation.

- c The vertical drop at the right and left sides of the door opening.
  - The vertical drop must be at least 120 mm (for doors with a drive).
  - The vertical drop must be at least 240 mm (for manually operated doors with outside handle).
- d The lateral space required to the left and right of the door opening must be at least 85 mm.

#### ☑ Functional check

When all 4 requirements are met, you can proceed with installation.

Please refer to the order for the opening dimensions of the door.

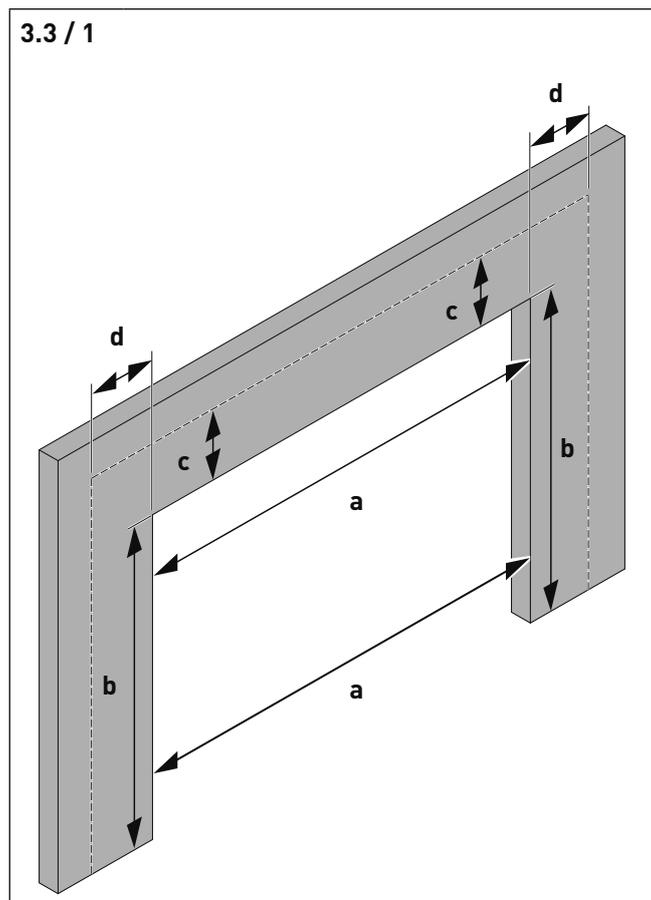


⇨ Take the following measurements on the inside of the door opening:

- a The passage width at the top and bottom of the door opening.  
The delivered opening dimension must match the door width opening.
- b The passage height at the right and left sides of the door opening.  
The delivered opening dimension must match the required clearance.


### 3.4 Reference level specification

#### NOTE!

- Correct installation of the side frame is important; ensure that the door completely covers the opening and is not installed askew.
- The reference level only applies for standard grid heights. With special heights (shortened frame), the height specification of the frame must be transferred to the structure!

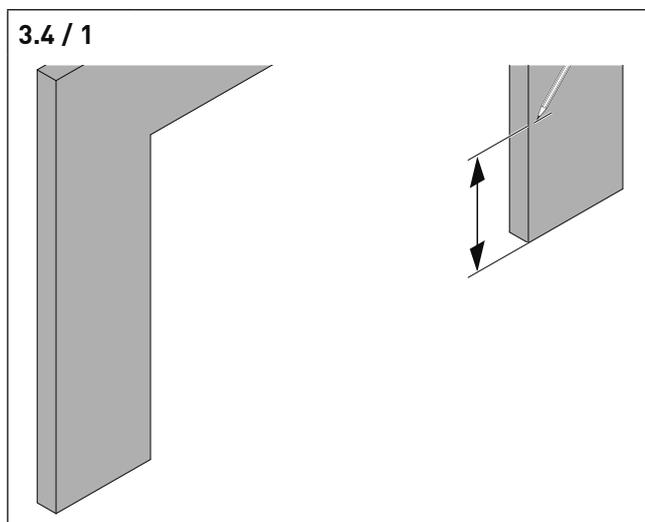


- ⇨ Draw a mark on one of the sides of the opening: **one metre** from the **upper edge of the finished floor** (UFF).

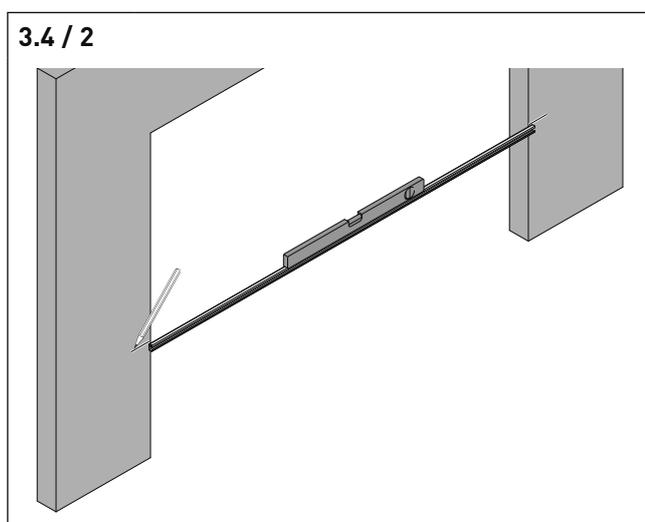


- ⇨ Using the rear cross strut and a water scale, transfer the measurement on the other side (a hose spirit level can also be used for this purpose).
- ⇨ Measure the transferred height. The height must be **at least** 1 m.

If a height of 1 m from the floor is undercut when transferred to the other side, the reference level must be transferred from this side!

### 3.5 Lintel casing installation

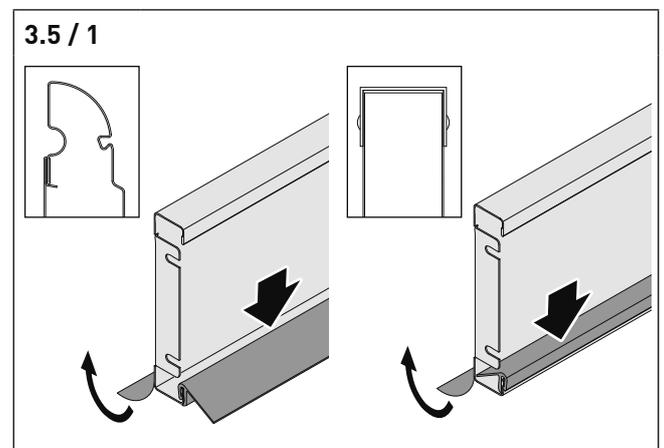

- ⇨ Remove the protective film of the lintel casing.
- ⇨ Fit the headroom seal on the lintel casing.

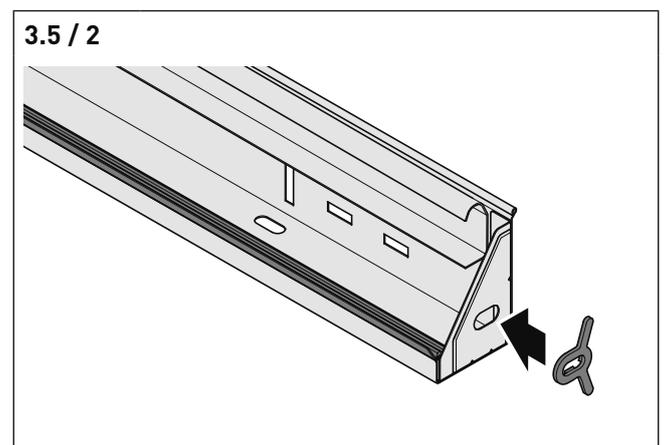


- ⇨ Insert the frame spacer into the gusset plate in the frame from below.

**NOTE!**

- The elements must not be damaged.
- The surface of the frame must not be scratched.
- The elements must be fastened flushly on the outside.


3.5 / 3

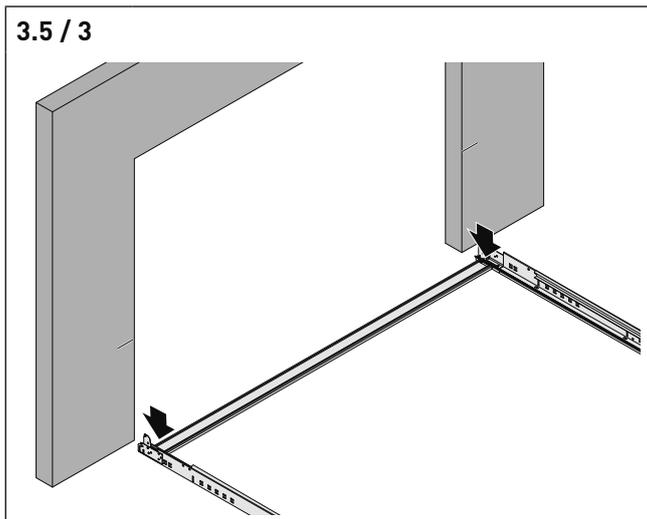

⇨ Connect the vertical frame to the lintel casing.


3.5 / 4

Type 2

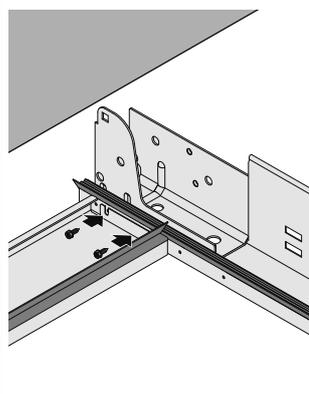

3.5 / 5

Type 2

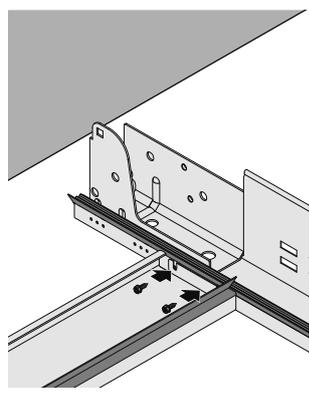

⇨ Fasten the elements on each side with 2 metal screws:

- Lintel variant 120 mm: Fig. "3.5 / 4"
- Lintel variant 240 mm: Fig. "3.5 / 5"

⇨ Tighten the screws.

**3.6 Frame setup**

The frame can be installed depending on the installation site situation **in front of the reveal** or **in the reveal**.


- 📄 "3.8 Fastening the frame (installation in front of the reveal)"
- 📄 The supplied supplementary sheet must be observed (installation in the reveal)

The following figures show the situation for installation in front of the reveal.

**⚠ WARNING!**



- Alignment of the frame must be carried out by two persons.
- The frame must not be warped or canted during alignment.

3.6 / 1

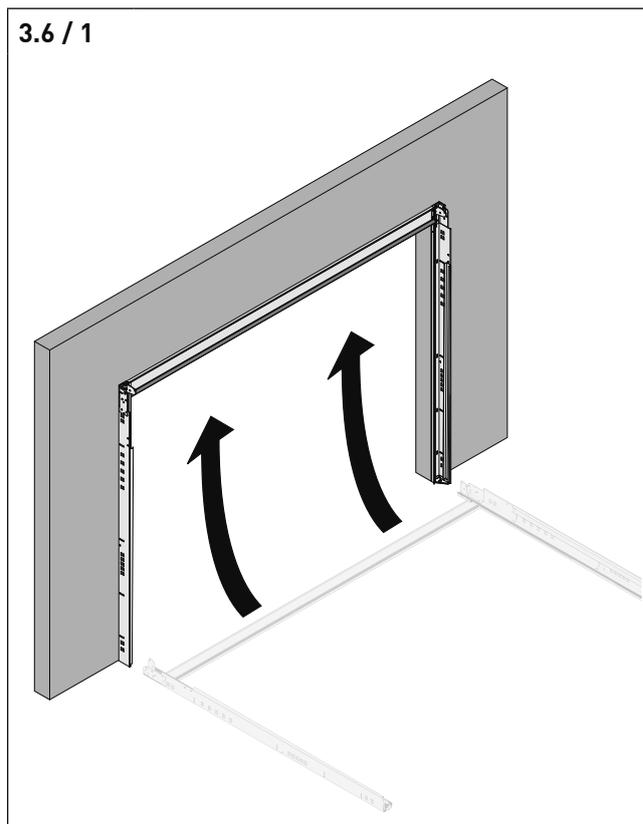


⇨ Position the pre-assembled internal frame in front of the opening.


### 3.7 Frame alignment and fixing

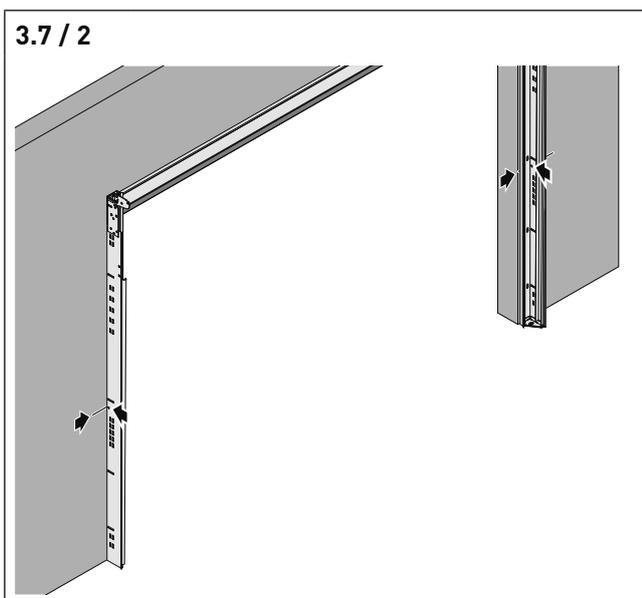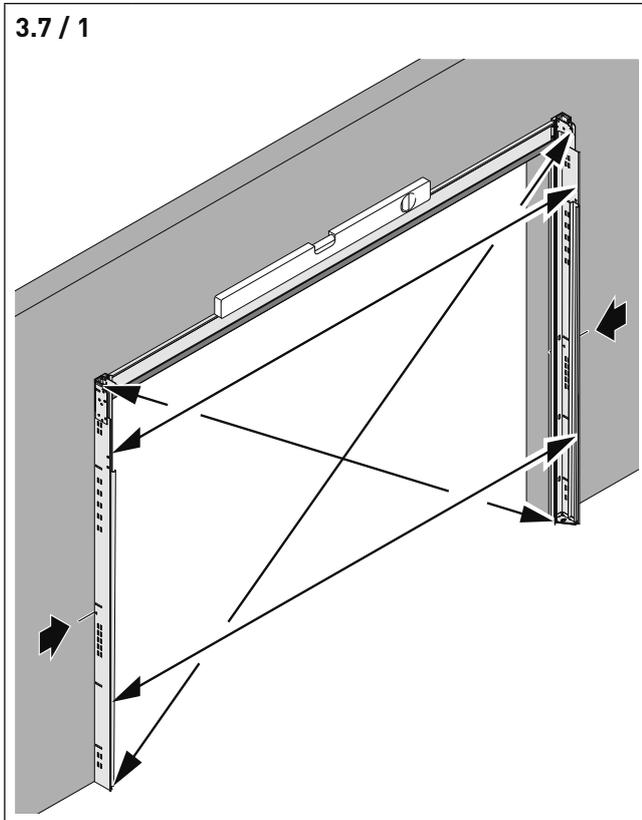


- ⇔ Align the frame centred on the door opening.
- ⇔ Apply the punched mark of the frame on both sides flush with the mark on the masonry.

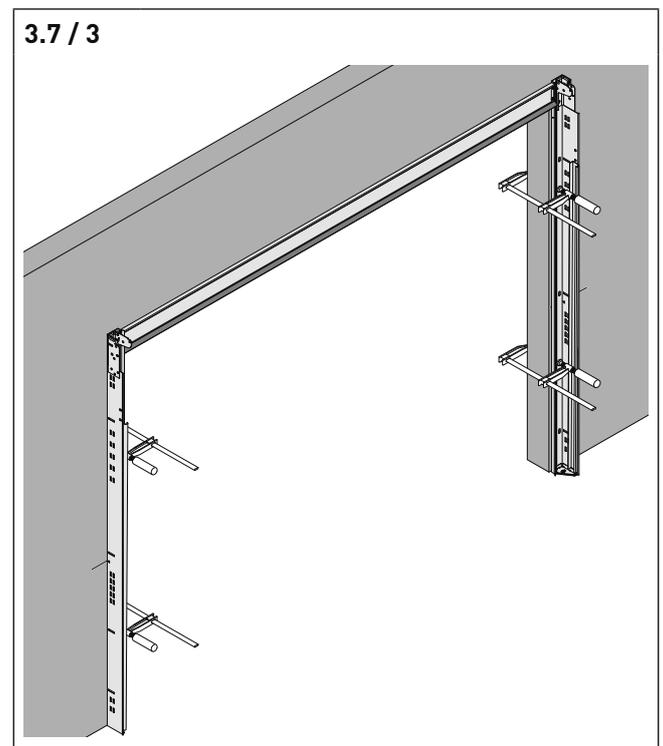

- ⇔ Fix the position with screw clamps.
- ⇔ Measure the distance to the frame above and below (Fig. "3.7 / 1").  
The distances must be equal above and below.  
Frame clearance measurement = width order measurement
- ⇔ Check the diagonal measurements (Fig. "3.7 / 1").
- ⇔ Check whether the frame is fixed horizontally in the door opening (Fig. "3.7 / 1").

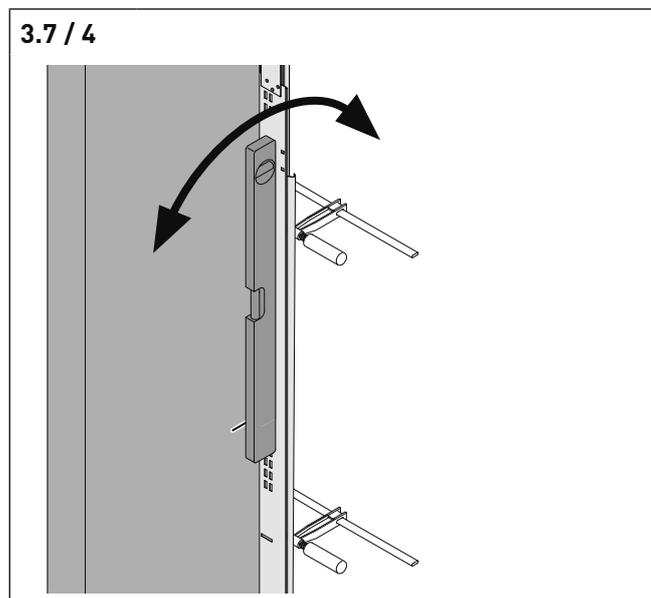

⇨ Check whether the right and left frame are aligned vertically to the door opening.

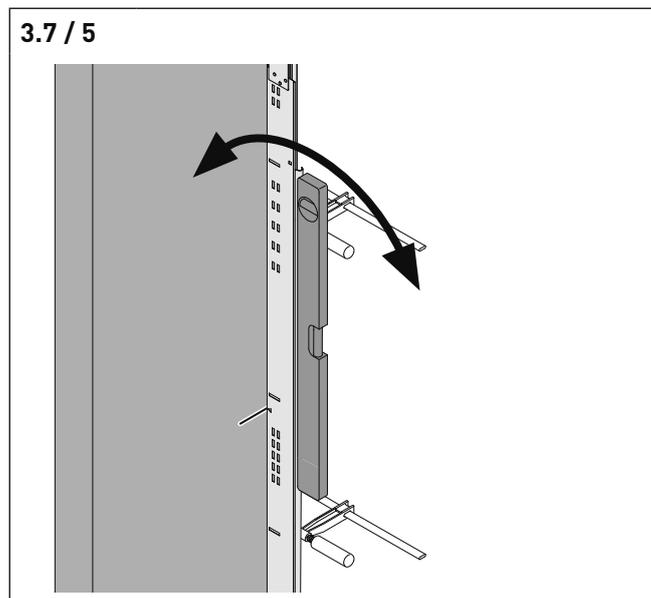


⇨ Check whether the right and left frame are aligned vertically to the masonry. If the frame is not vertical, it must be shimmed.

**Functional check**

In order to ensure fault-free operation of the door, all indicated adjustments must be made.

**3.8 Fastening the frame (installation in front of the reveal)**

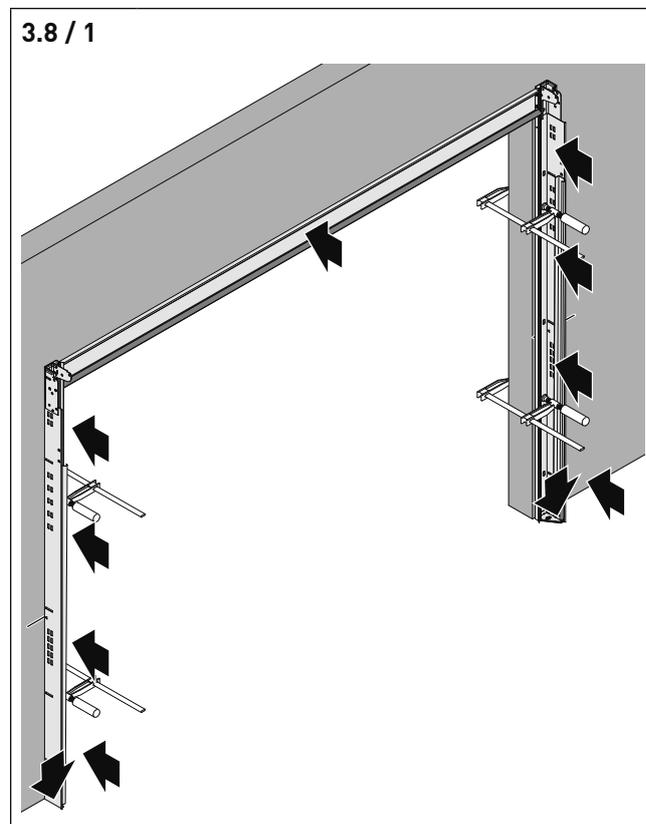

There are **two** possibilities for installing the frame.


**Installation variant 1 (installation inside)**

⇨ If there is **adequate reveal** available behind the frame, fasten the frame **through the pre-punched holes in the frame** (Fig. "3.8.1 / 1" to "3.8.1 / 4").


**Installation variant 2 (installation outside)**

⇨ If there is **not adequate reveal** behind the frame, fasten the frame on with the assembly brackets **to the right and left of the frame** (Fig. "3.8.2 / 1" to "3.8.2 / 6").

### 3.8.1 Installation variant 1 (installation inside)

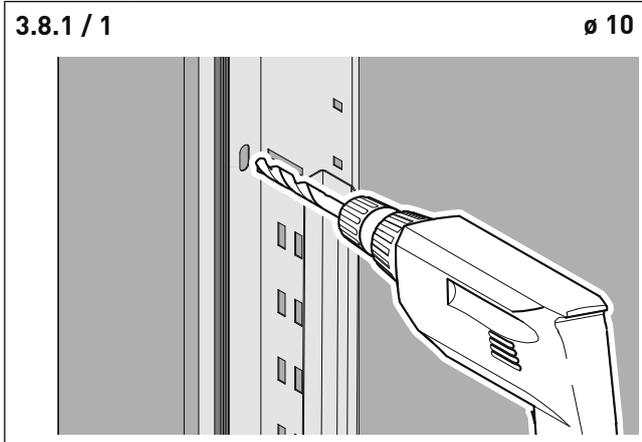


⇒ Drill holes into the frame through the aforementioned holes to a minimum depth of 60 mm in the masonry.

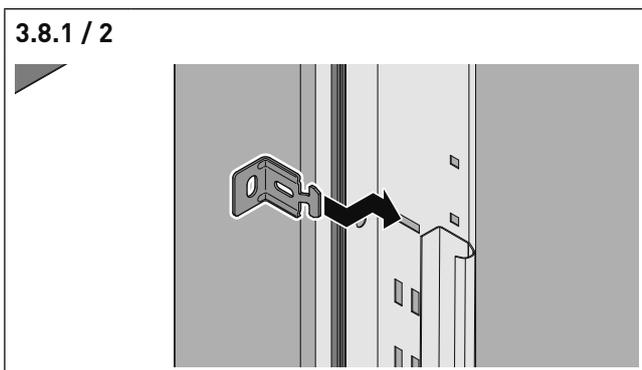


⇒ Use the supplied assembly brackets.

### NOTE!

The expanding direction of the anchor must be vertical!

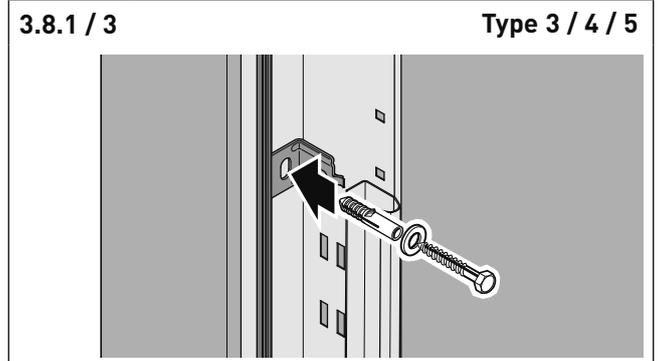


⇒ Screw in the anchors.  
 ⇒ Fasten the frame on with the assembly brackets.

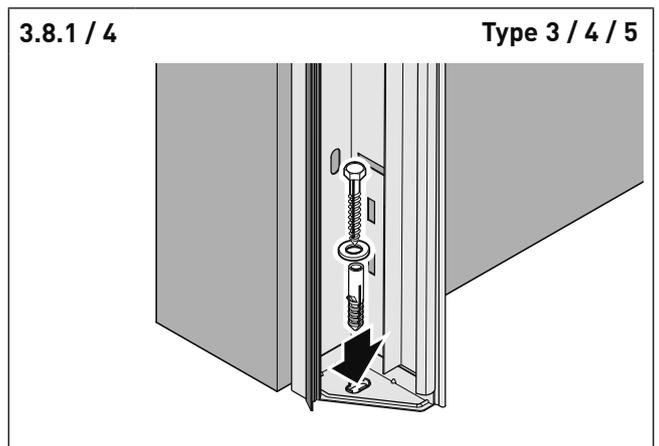


⇒ Fasten the frame to the floor.


### 3.8.2 Installation variant 2 (installation outside)

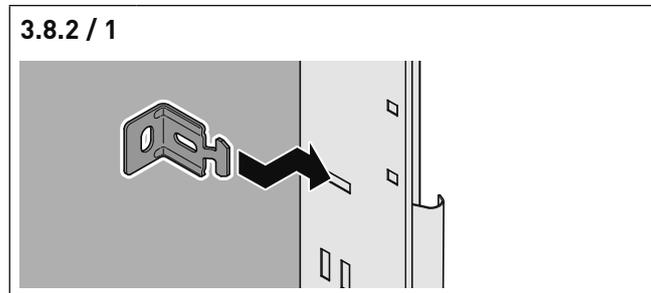

⇨ Hold the assembly brackets next to the frame at the height of the pre-punched holes in the frame.

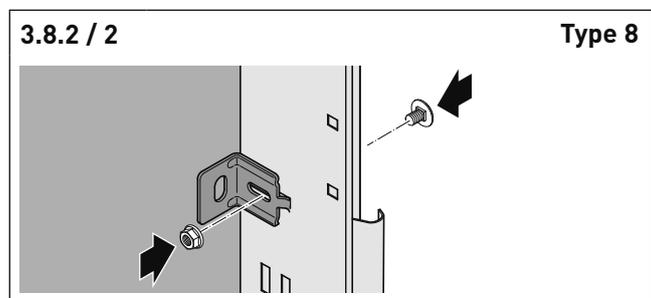


⇨ Fasten the mounted brackets on the sides of the frame with one screw each.

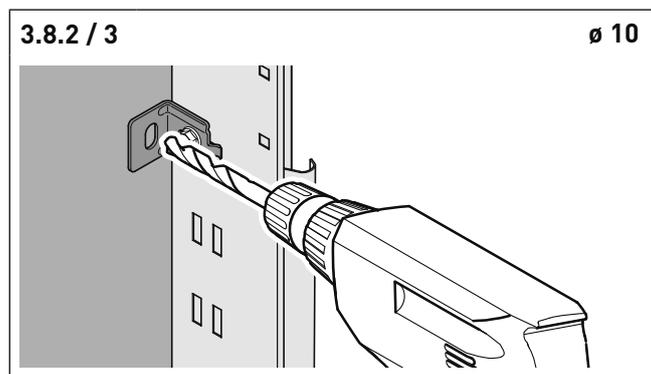

⇨ Drill a hole through the assembly brackets into the masonry next to the frame to a minimum depth of 60 mm.

#### **NOTE!**

The expanding direction of the anchor must be vertical!

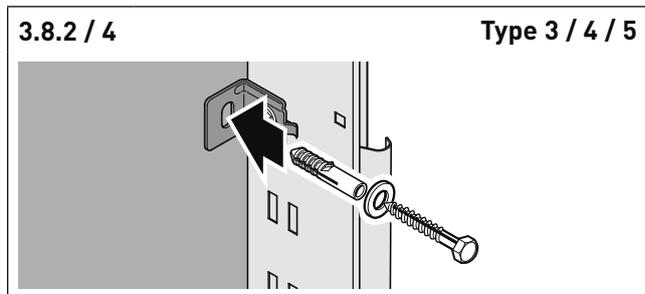



- ⇨ Screw in the anchors.
- ⇨ Position the assembly brackets on the frame and screw the assembly brackets into the masonry.
- ⇨ Fasten the mounted brackets on the sides of the frame with one screw each.

#### **NOTE!**

The frame bracket must be fastened to the structure **1x!**

The fastening takes place independently of whether you have mounted the assembly brackets in or next to the frame.

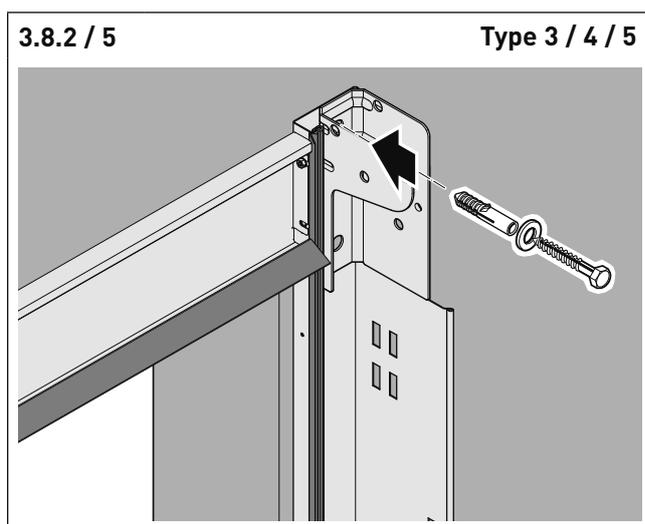

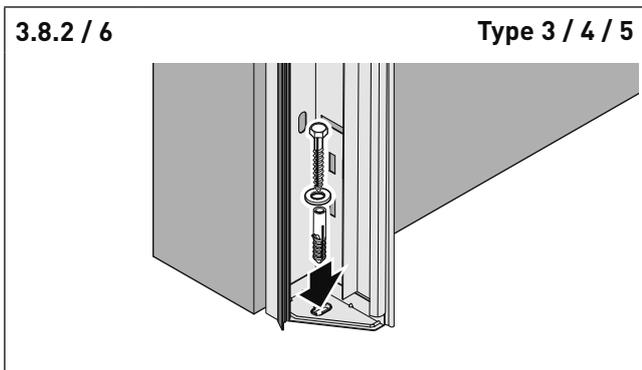

⇒ Fasten the frame to the floor.

### 3.9 Installing the lintel casing

There are **two** possibilities for installing the lintel casing.


#### Installation variant 1 (through the lintel casing)

⇒ If there is **adequate reveal** behind the lintel casing:  
Fasten directly through the lintel casing  
(Fig. "3.9.1 / 1" to "3.9.1 / 2").

#### Installation variant 2 (with lintel casing holder)

⇒ If there is **not adequate reveal** behind the lintel casing:  
Fasten the lintel casing onto the lintel casing holder  
(Fig. "3.9.2 / 1").

#### 3.9.1 Installation variant 1 (through the lintel casing)

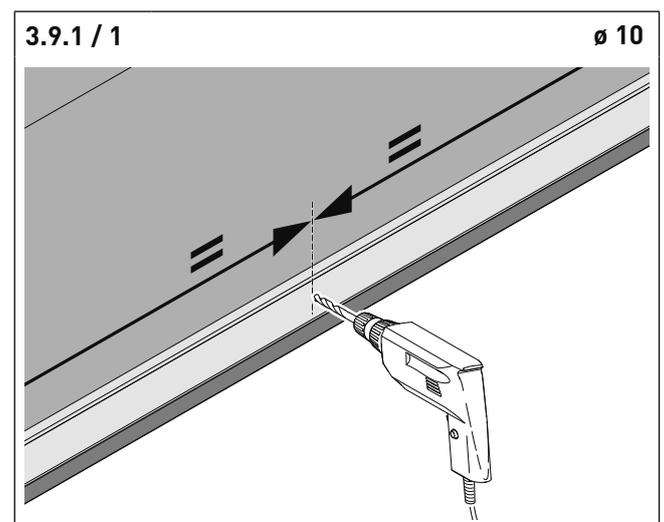


One screw connection in the lintel casing is adequate for a maximum door width of 3 m.

With a door with greater than 3 m, you require two screw connections.


In the process, align the two screw connections over the length of the lintel casing.

⇒ Drill through the centre of the lintel casing to a minimum depth of 60 mm in the masonry.

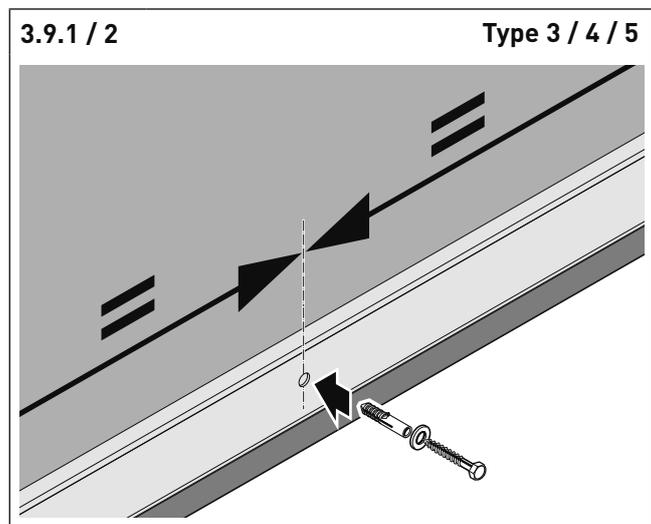

↪ Fasten the lintel casing into the masonry.

**3.9.2 Installation variant 2 (with lintel casing holder)**

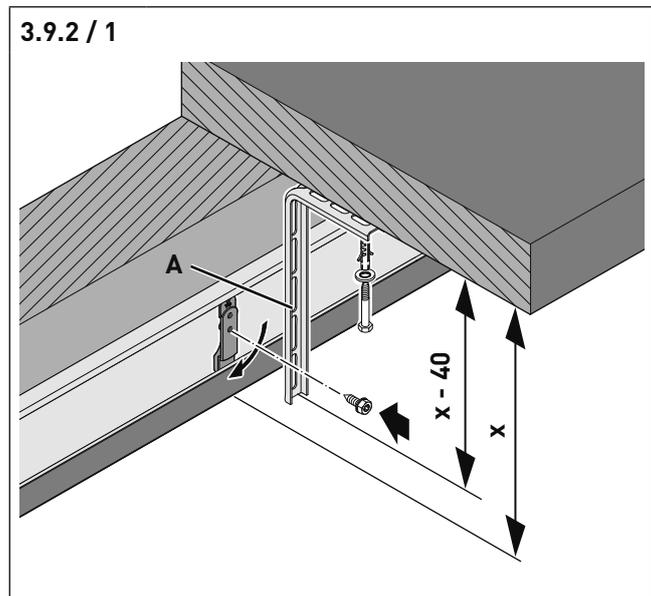

One screw connection on the lintel casing is adequate for a maximum door width of 3 m.

With a door with greater than 3 m, you require two screw connections.

In the process, align the two screw connections over the length of the lintel casing.


↪ Install the lintel casing onto the lintel casing holder (A).

**3.10 Assembly of the guide rails on the frame**

**3.10.1 Preparation of the upper guide rails**

The following illustrations show the installation on right inner side.


They must be implemented inversely on the left inner side.

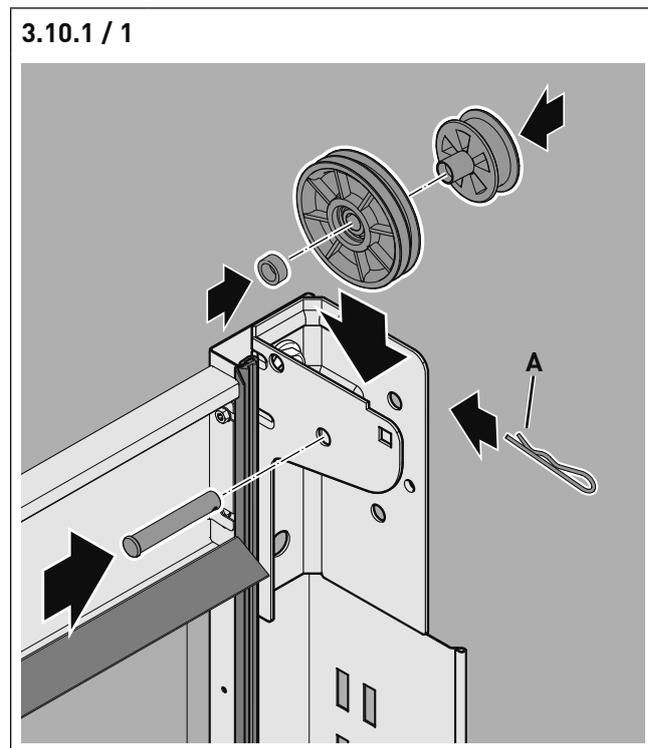



↪ Insert the rollers, spacer and the support roller into the frame brackets on the left and right.

↪ Secure the bolt with the spring connector (A).


### 3.11 Installing the torsion spring shaft

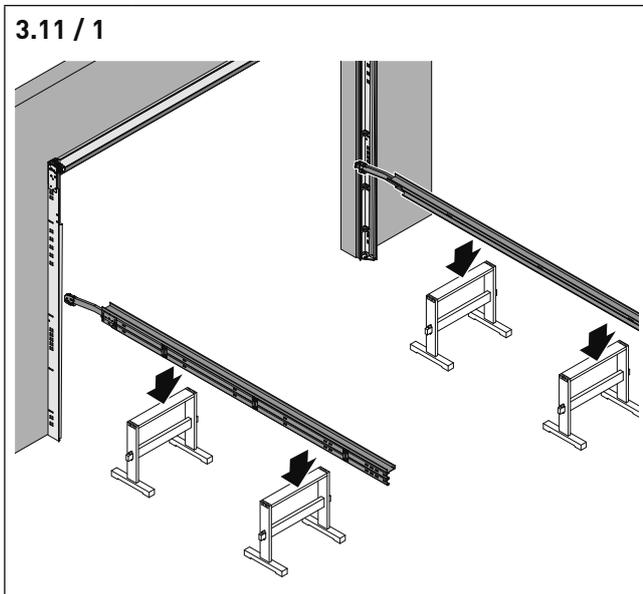


⇨ Place the left and right frame packages on supports.

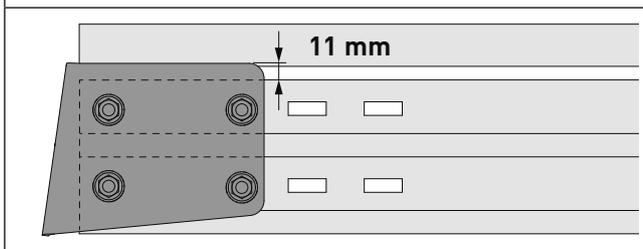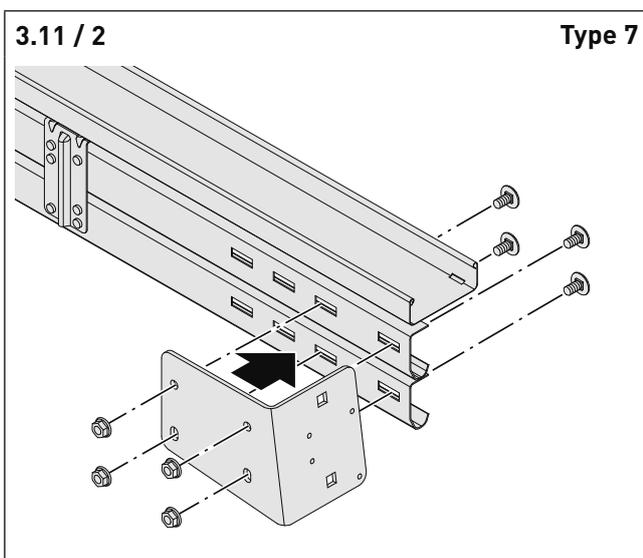


⇨ Mount the left and right angle brackets to the frame packages using the four M8x16 carriage bolts.

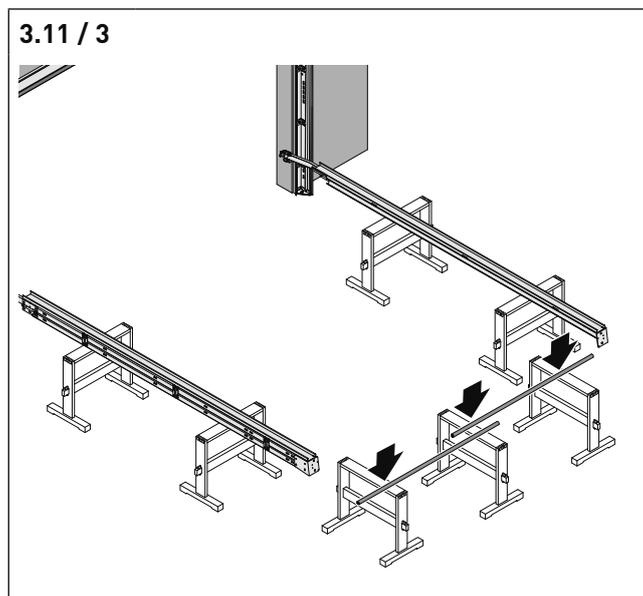


⇨ Place the two spring shaft parts between the frames on the supports.

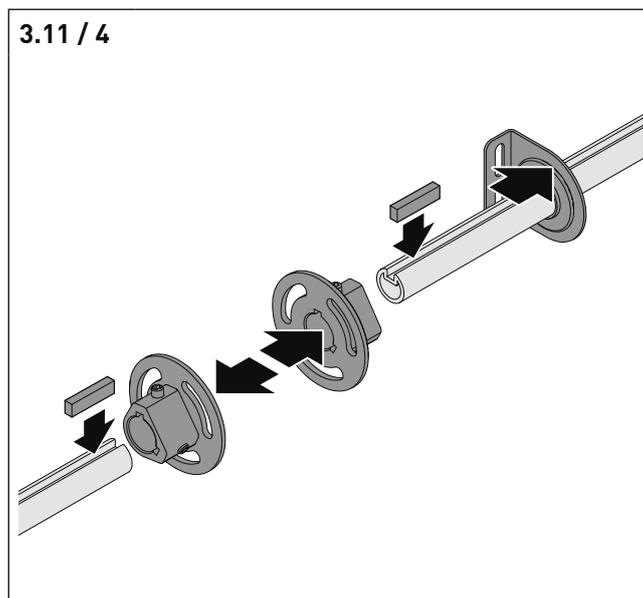


⇨ Slide the central bearing onto the spring shaft.  
 ⇨ Insert the parallel keys.  
 ⇨ Slide the shaft couplings over the parallel keys.

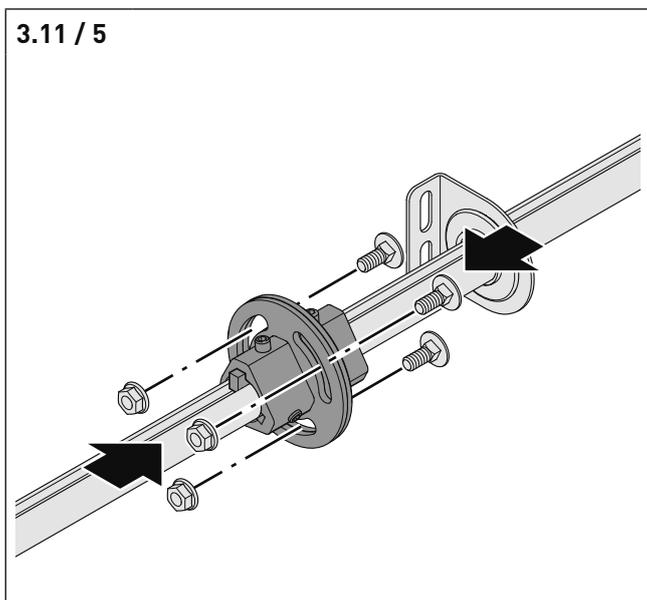


⇨ Screw the shaft coupling together.

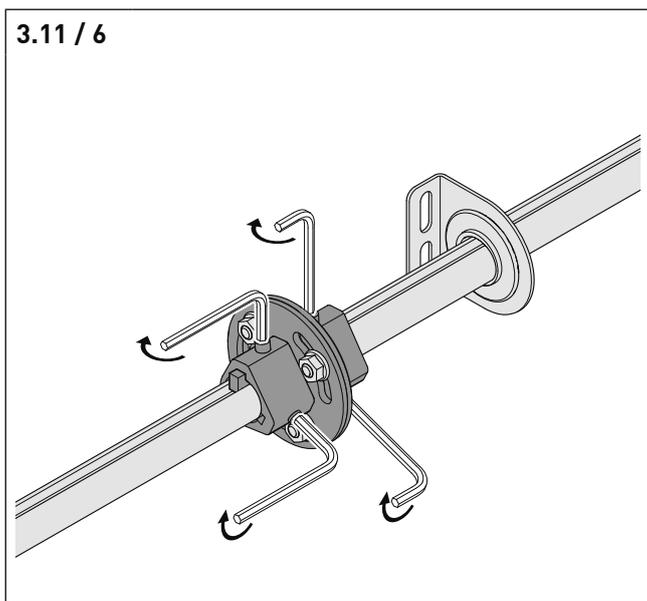

⇨ Screw the threaded pins firmly to the shaft coupling.

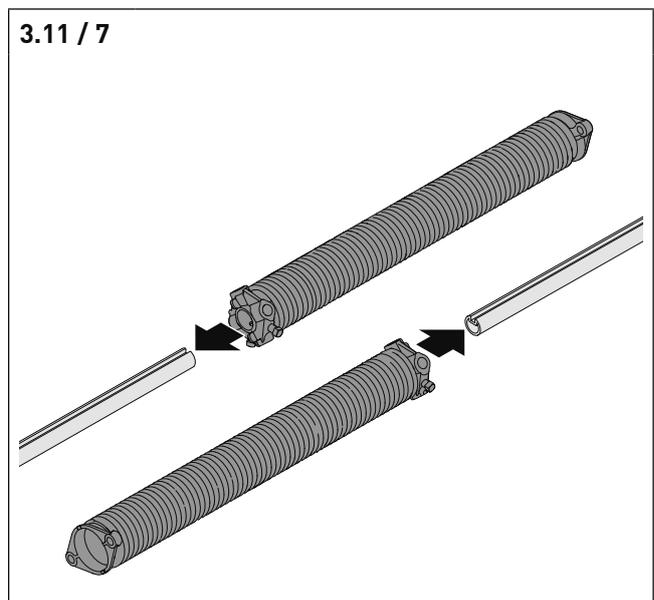


⇨ Observe the coloured markings (left = blue, right = red).  
⇨ Slide the spring package on.

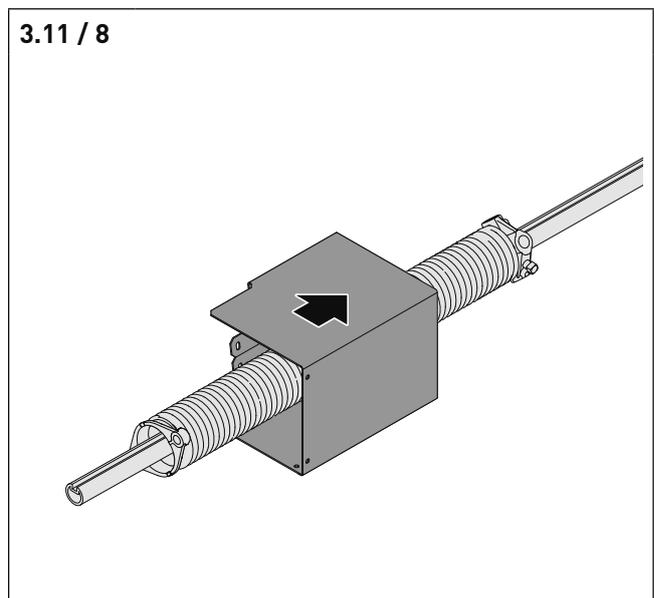


⇨ Slide the left and right grasp guards on.

3.11 / 9

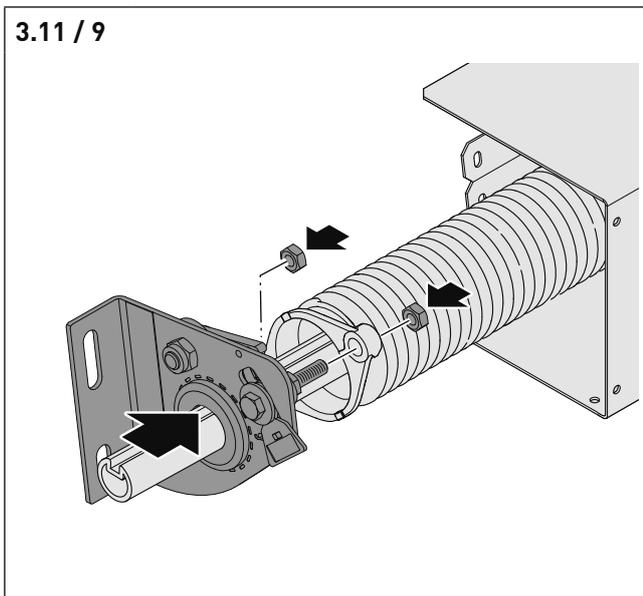


- ⇨ Slide the left and right spring breakage guards on.
- ⇨ Install the left and right spring package on the spring breakage guards (according to the manufacturer's installation guide).
- 📄 Spring breakage guard installation guide

3.11 / 11

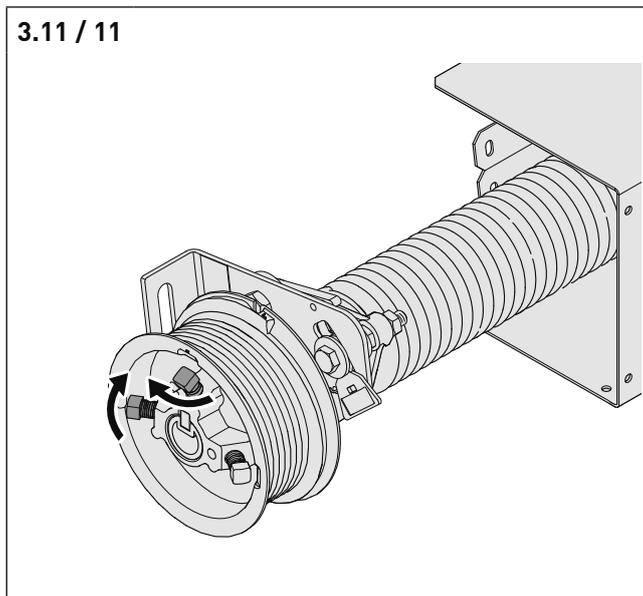

- ⇨ Use the screws to clamp the left and right cable spool to the spring shaft.


3.11 / 10

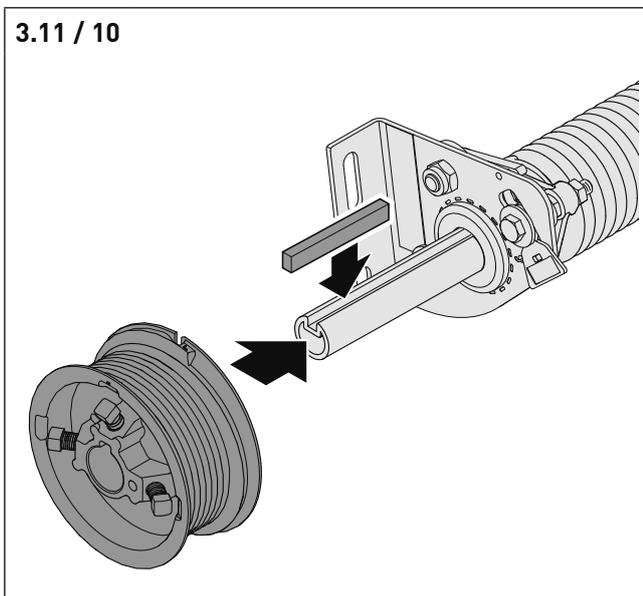

- ⇨ Insert the parallel keys.
- ⇨ Observe the colour markings on the cable spools (left = black, right = red).
- ⇨ Install the left and right cable spools flush with the end of the spring shafts.

3.11 / 12

Type 12


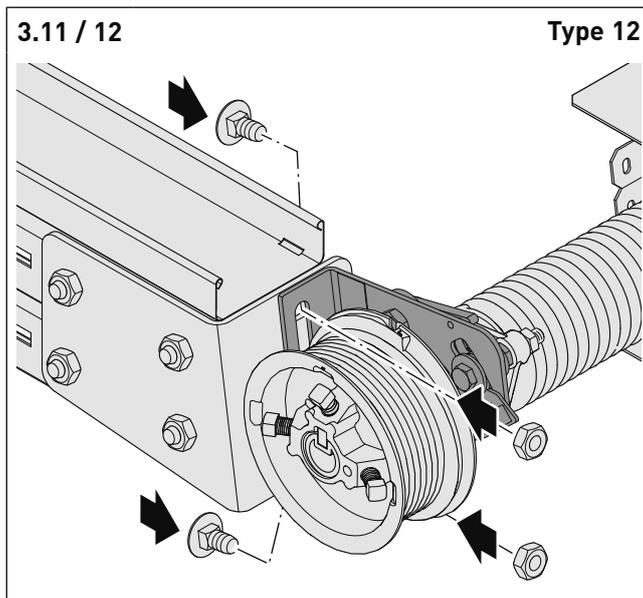


- ⇨ Screw the left and right torsion screw system to the angle brackets with two M10x20 carriage bolts each.

### 3.12 Fastening the upper guide rails

#### NOTE!

When fastening, the screw must be inserted into the curved rail from inside. The corresponding is positioned on the outside on the curved rail. Otherwise, the screw connection blocks the later door run.

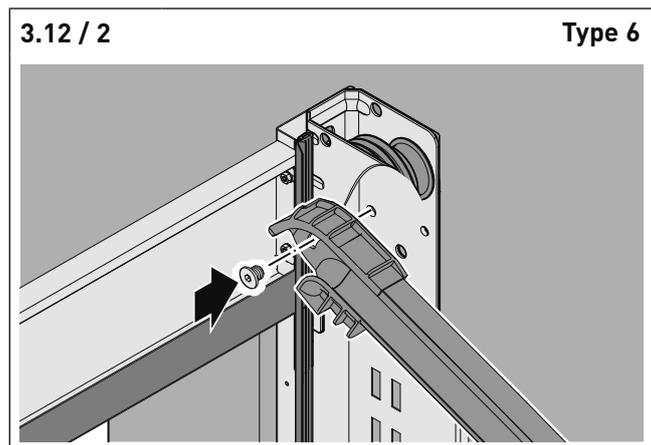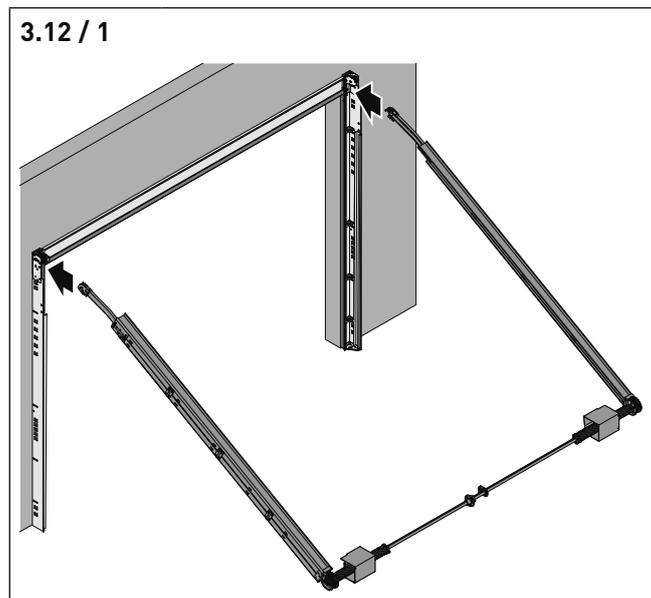


- ↪ Fasten the curved rail with one screw on each side of the frame brackets.
- ↪ Only tighten the screw slightly so that the frame can be aligned horizontally.
- ☑ The plastic curved rail must engage in the hole of the bracket. The correct connection and function as a pivoting point can only be guaranteed in this manner.

### 3.13 Assembly of the guide rails on the ceiling


#### 3.13.1 Fastening and aligning the upper guide rails

#### NOTE!

- The frame packages are not canted when pivoted upwards.
- The side guide rails and the spring shaft must be exactly horizontal.

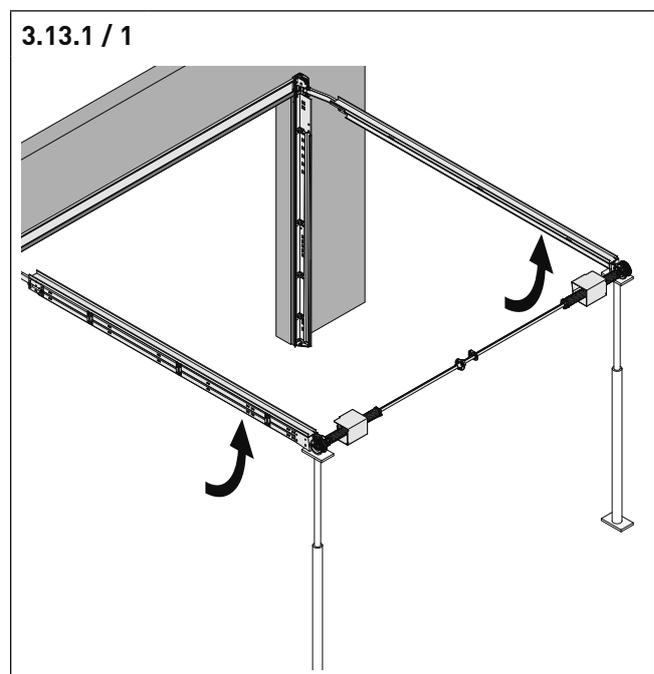


- ↔ Pivot the fastened frame packages in place and support them.

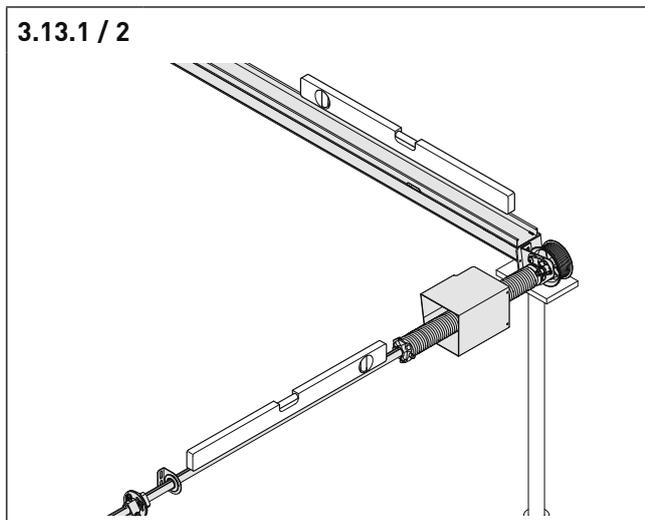

- ⇨ Align the spring shaft horizontally.
- ⇨ Align the guide roller horizontally.


**3.13.2 Assembly of the lower curved rail**

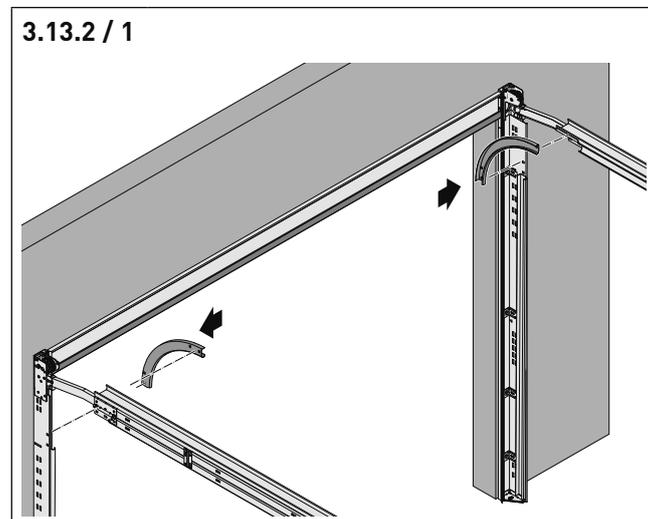

- ⇨ Adjust the right and left curved rails between the vertical and horizontal rails.

**NOTE!**

When fastening, the screw must be inserted into the curved rail from inside. The corresponding is positioned on the outside on the curved rail. Otherwise, the screw connection blocks the later door run.

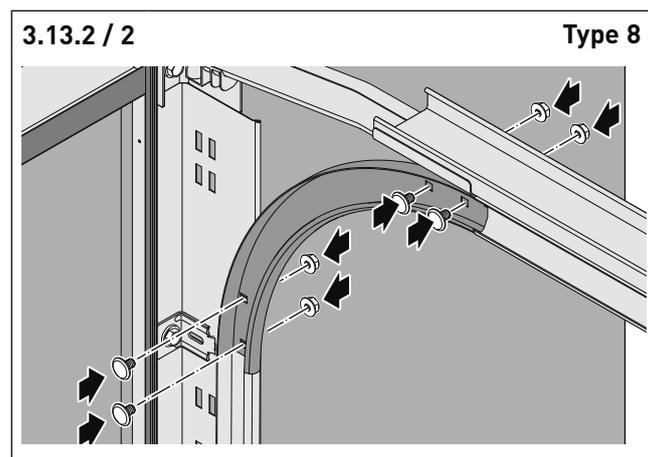


- ⇨ Fasten the curved rails.
  - ⇨ Align the rail end flushly.
- Any protrusions that could impede door operation must be reworked with the pliers.

**NOTE!**

In order to guarantee correct door travel, the guide rails must be parallel.

3.13.2 / 3

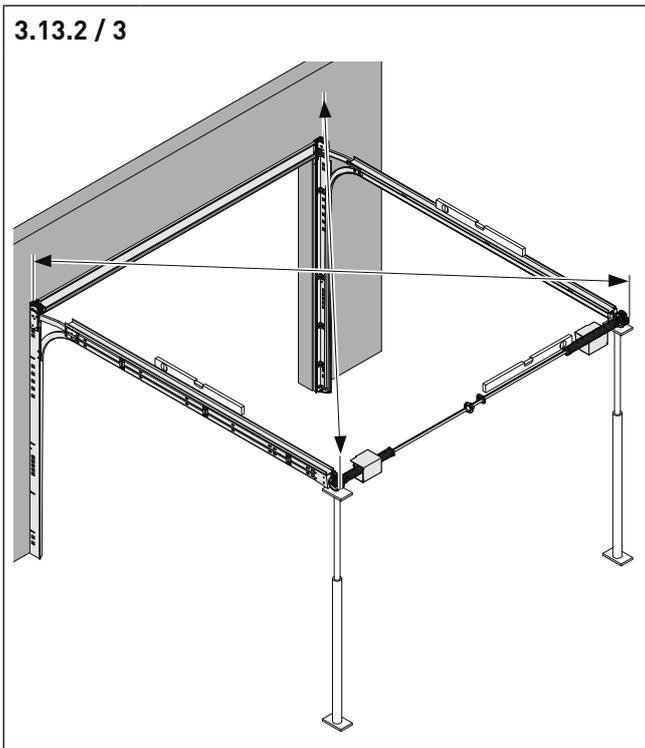

The guide rails are aligned correctly when both diagonals are of equal length. In order to achieve exact measurement results, the same measuring points must be used for each diagonal.

↔ Measure the diagonals and align the guide rails in parallel.

**3.13.3 Assembly of the suspensions on the guide rails**


**NOTE!**

Prior to assembly of the suspension, the door must be aligned as described above (refer to Fig. "3.13.2 / 3").




**NOTE!**

- The suspensions must be mounted.
- On each side of the frame, three suspensions must be screwed upward. It is preferable to use the second and fifth punch patterns of the horizontal guide rails (as seen from the structure outward) to fasten the two suspensions to the ceiling.
- The third suspension must be fastened in the last punch pattern of the guide rails together with the angle bracket, using two M8x16 screws each.
- Additionally, the spring shaft's central bearing must be fastened upward with one suspension (see Figs. "3.13.3 / 1" to "3.13.3 / 4").

3.13.3 / 1

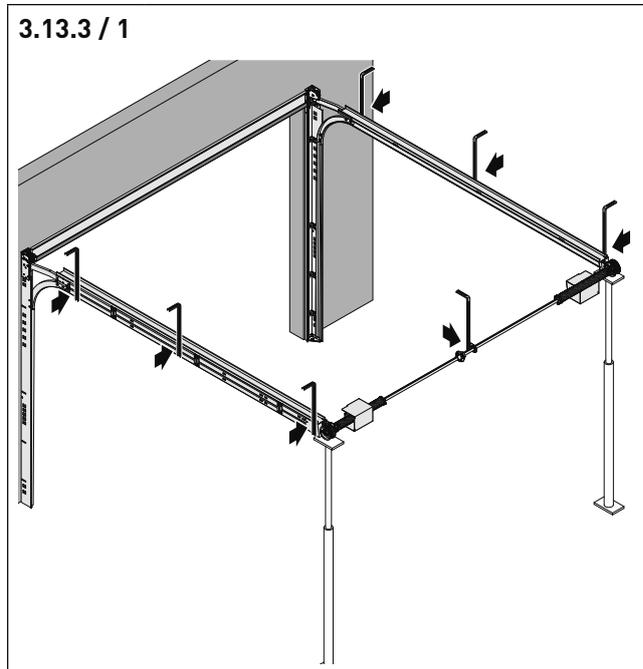

3.13.3 / 2

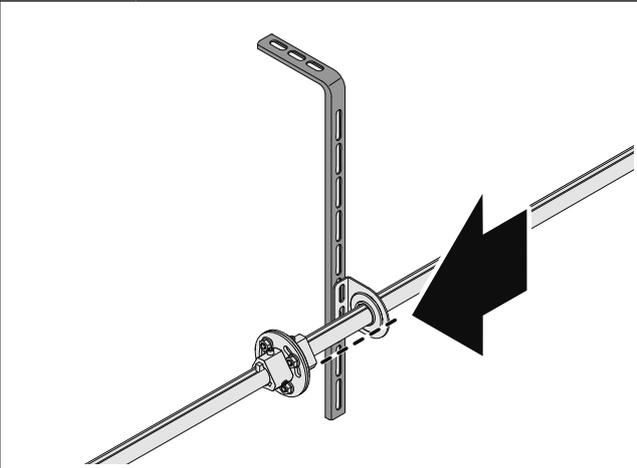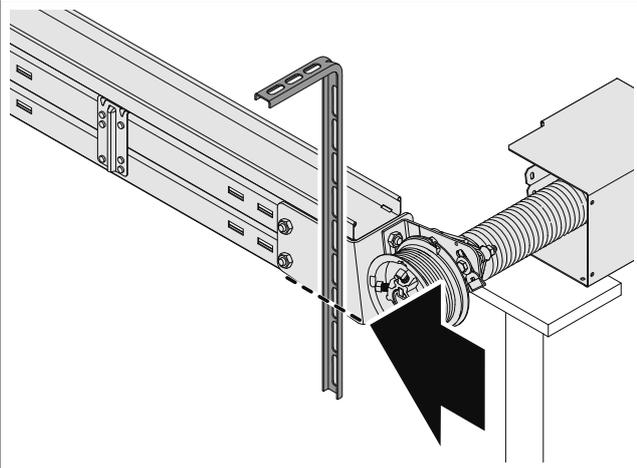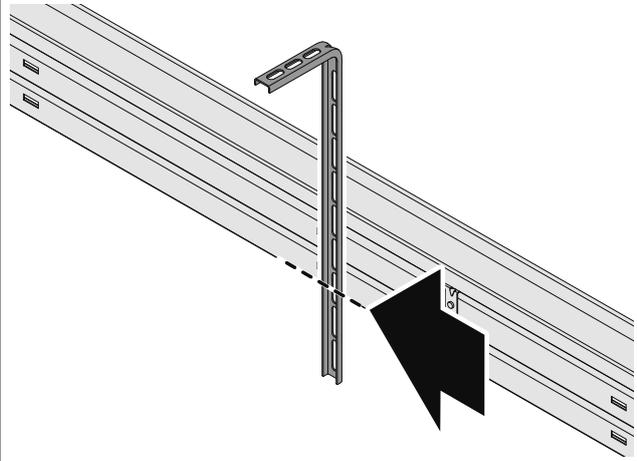


⇨ Attach the suspension in order to define the necessary length.

⇨ Mark any protrusion of the suspension.

In order to assure the greatest stability of the guide rail, the suspension must protrude slightly, however, remain flush with the lower edge of the horizontal frame.

With suspensions that must be rotated inward due to an inadequate lateral stop, the suspension must also be screwed into the wall below the guide rail.

⇨ Cut off any protrusion at the marked point.

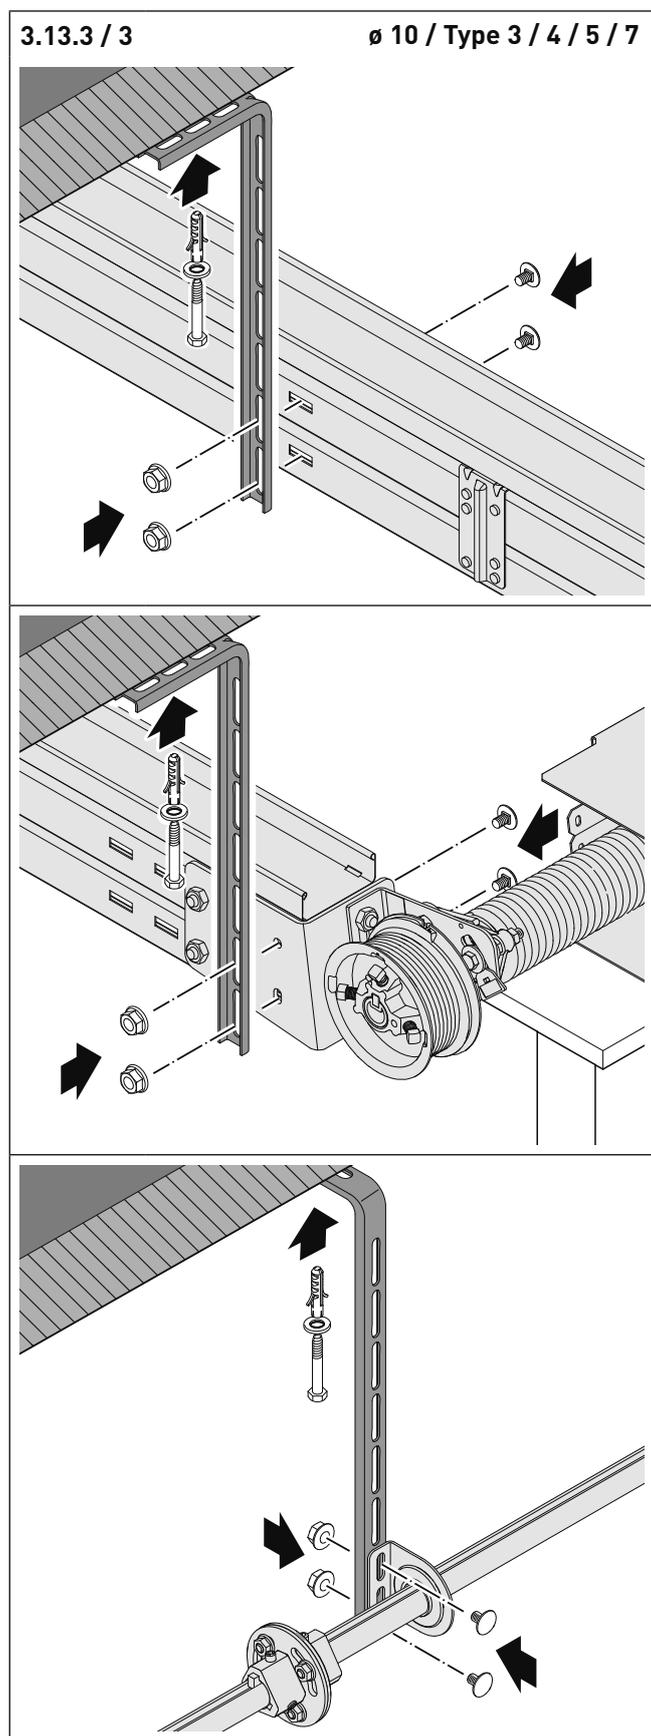


- ⇨ Hold the suspension on the guide rail and mark the drilling point.
- ⇨ Drill to a minimum depth of depth of 60 mm in ceiling.

**NOTE!**

When fastening, the screws must be inserted into the curved rail from inside.  
The corresponding nuts are positioned on the outside on the curved rail.  
Otherwise, the screw connection blocks the later door run.



- ⇨ Screw the suspension with two screws on the side of the guide rails.
- ⇨ Insert the anchor in the pre-drilled hole and fasten the suspension on the ceiling.
- ⇨ Assemble all additional suspensions as described (Fig. "3.13.3 / 1" to "3.13.3 / 3").

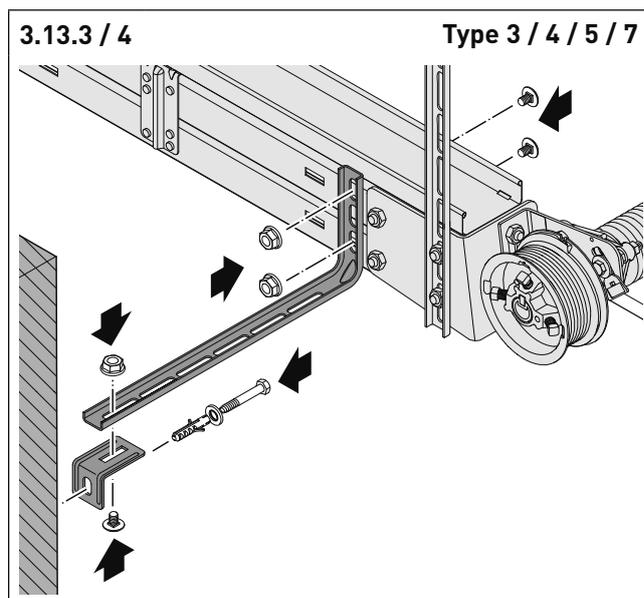

- In order to stabilise the door on the sides, it is necessary to a wall strut.
- ⇨ Screw the wall strut laterally to the guide rails using two screws.
- ⇨ Adjust the distance to the wall.
- ⇨ Screw the mounting bracket to the wall strut.
- ⇨ Screw the mounting bracket laterally to the wall.

### 3.14 Assembly of the door sections


#### 3.14.1 Preparation of the lower door section

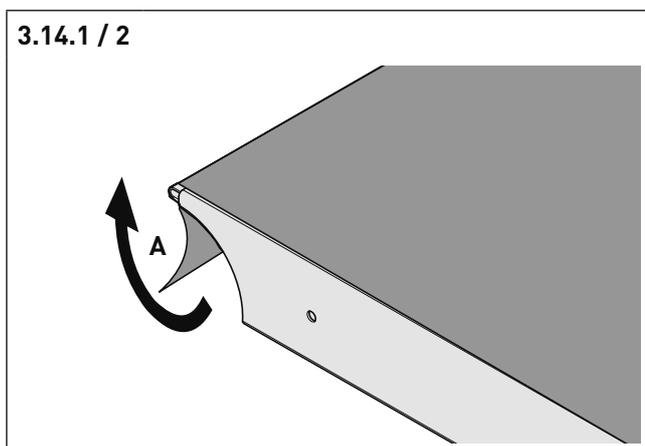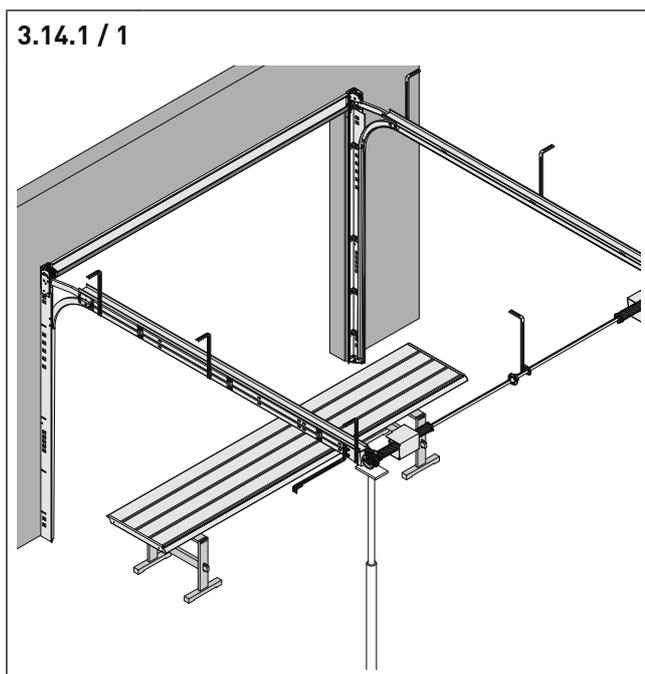

All sectional door panels must be provided with protective film. These can be in the area of the rounding (A) depending on the panel height.

⇨ Remove the protective film from the rounding area of the panels before mounting them.


Leave the protective film on the outside of the panel until the door assembly is completed.

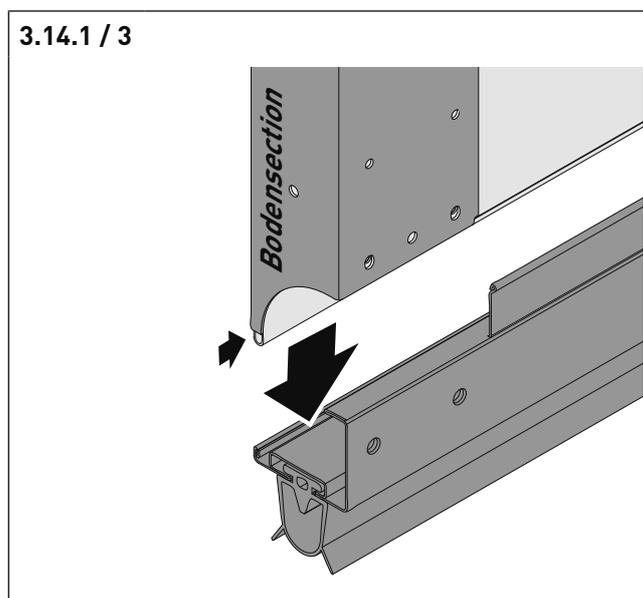


The lower door section of the side sticker is recognisable by the "bottom section" label and the shortened end caps.

⇨ Prepare the lower door section, if necessary, on supports.


⇨ Fit the bottom end profile on the lower door section.

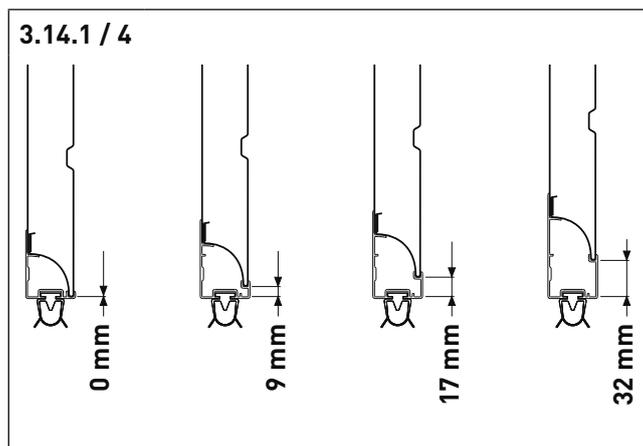

Four versions of the bottom end profile are available: 0 mm, 9 mm, 17 mm, 32 mm

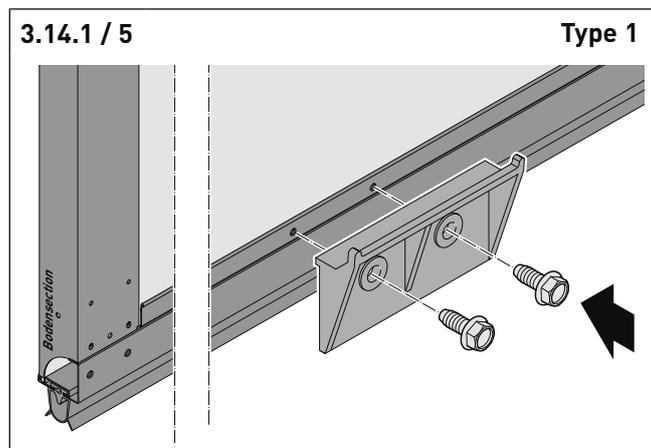

- ⇨ Fasten the bottom end profile in the centre of the bottom section.
- ⇨ Fasten the optional handle on manually operated doors.
- ⇨ Adjust the bottom section in the centre of the door opening.

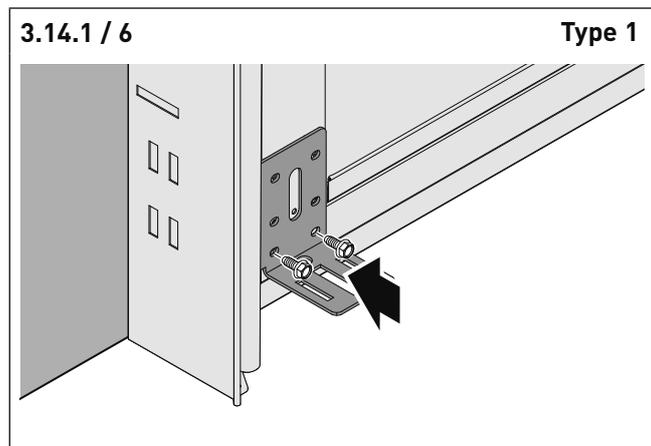


- ⇨ Fasten the lower screw of the bottom bracket together with the lower door section.


Additional holes must be made in the side steel end caps for the screw connection of the bottom bracket with some bottom end profiles.

**NOTE!**

The door leaf must not be drilled (max. 25 mm depth)!

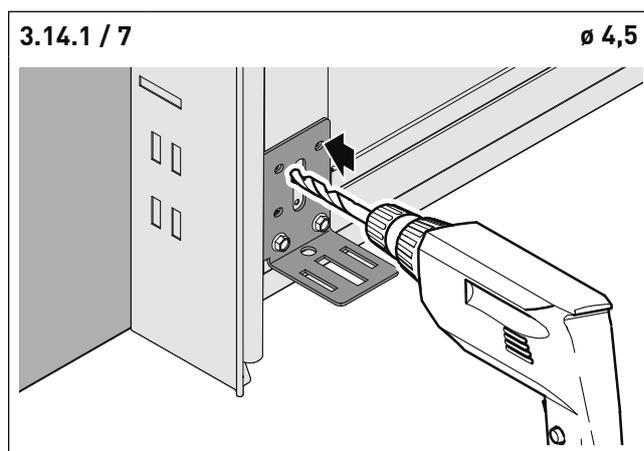


- ⇨ Drill the missing holes for the screw connection, if necessary.

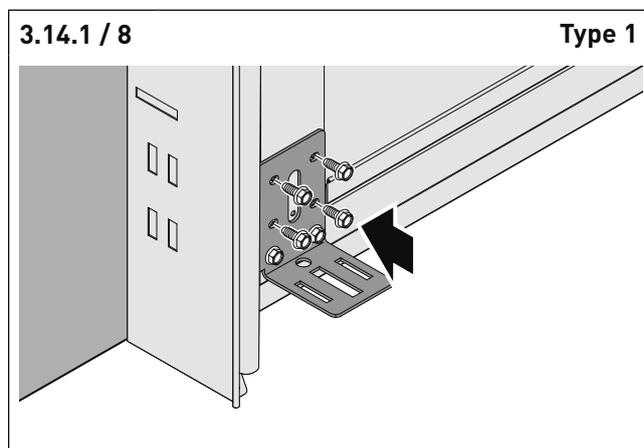

- ⇨ Fasten the remaining screws of the bottom bracket together with the lower door section.

3.14.1 / 9

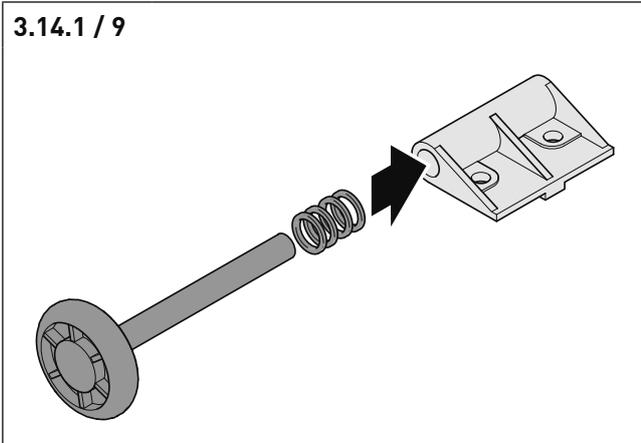


The door must be aligned centrally between the guide rails using the spacer rings (no more than eight).

⇨ Insert the track roller in the roller bracket.

3.14.1 / 10

Type 11

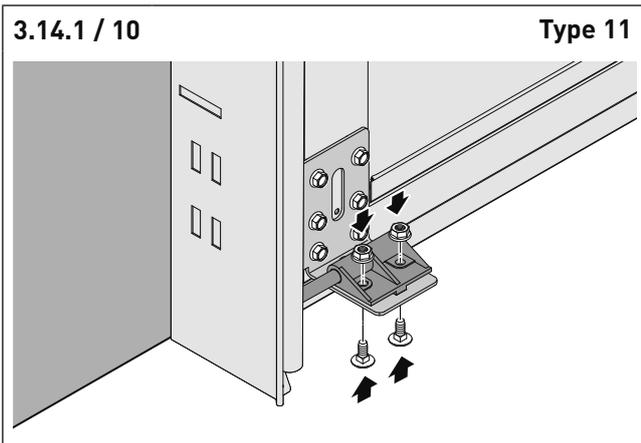

⇨ Slide the track roller into the guide rail.

⇨ Select the number of spacers so that there is a distance of 2 - 3 mm on both door sides between the track roller and the roller bracket.

⇨ Screw the roller bracket onto the bottom bracket.


⇨ Perform the steps to mount the bottom bracket on both sides of the bottom section.

**NOTE!**

In order to relieve the floor end profile, the lower section must be shimmed.

**Do not** trap the sealing lips on the frame seal between the panel and the frame.

3.14.1 / 11


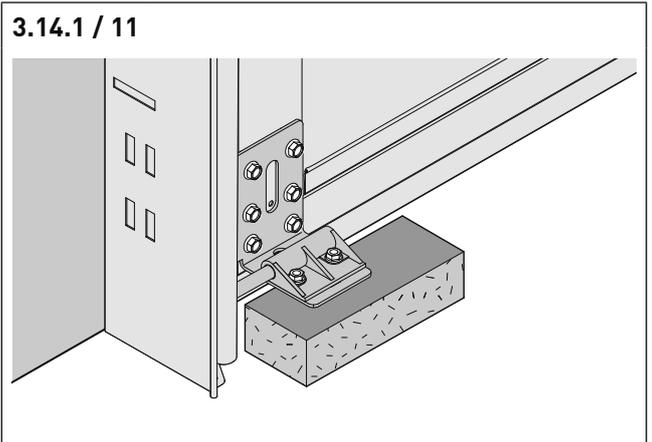


⇨ Place wooden blocks under the bottom bracket on both sides:

- The wooden blocks must be high enough to ensure that the door end profile is not pressed in.
- The door leaf must be horizontal and at the OFF height after being propped.

⇨ Adjust the track rollers.


### 3.14.2 Assembly of additional door sections

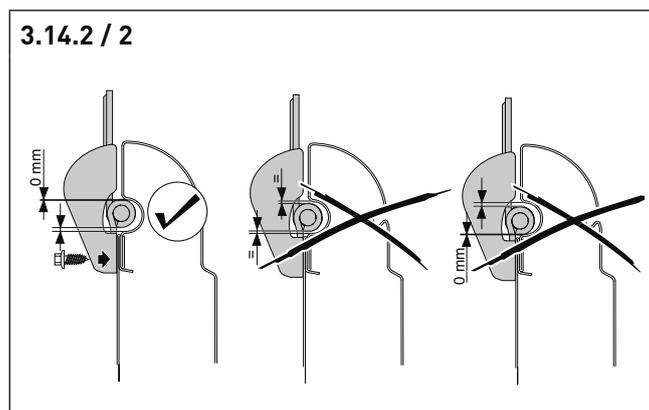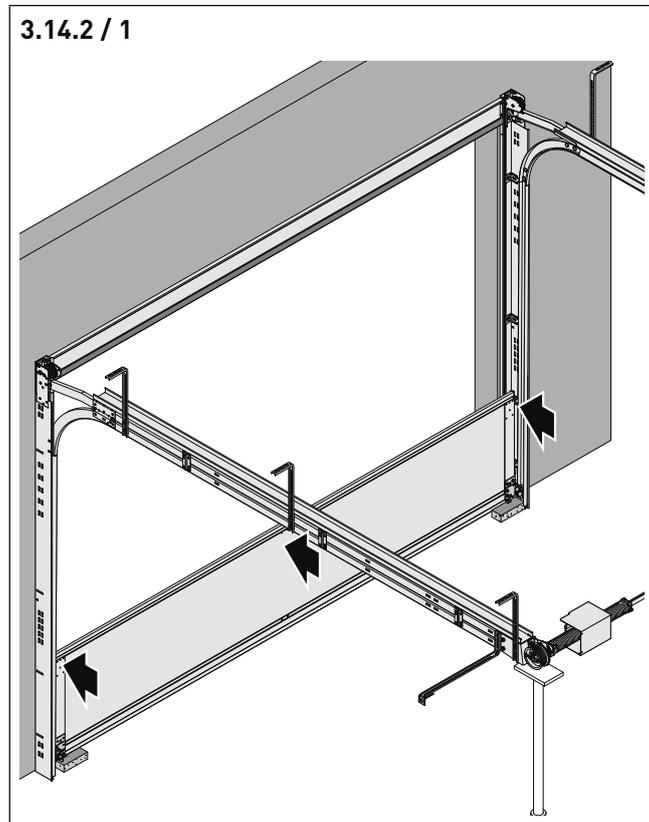


All central and lateral hinges must be screwed on in such a way that the hinge strikes the upper bead edge.

#### NOTE!


The door leaf must not be drilled (max. 25 mm depth)!

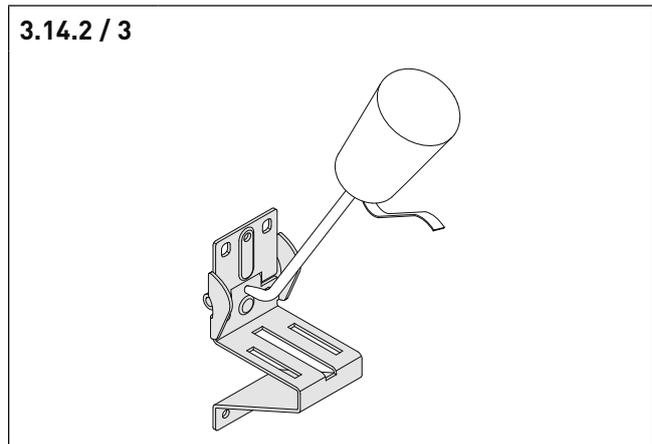


⇨ Oil the side hinge.

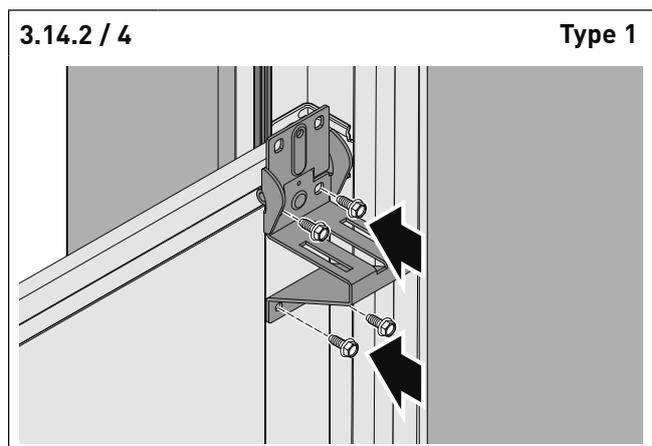


⇨ Fasten the side hinges on the drilled holes on the lower sections.

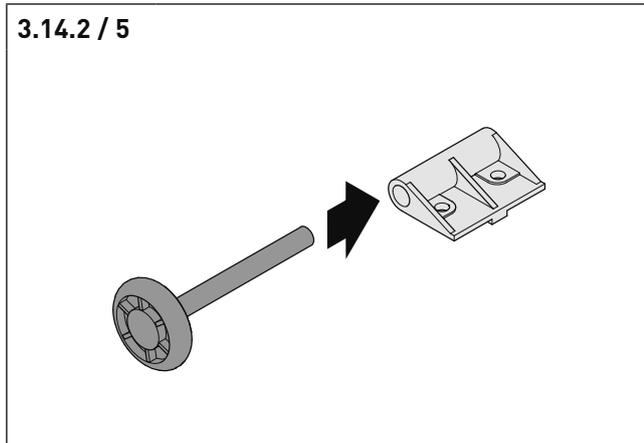


⇔ Insert the track roller in the roller brackets.

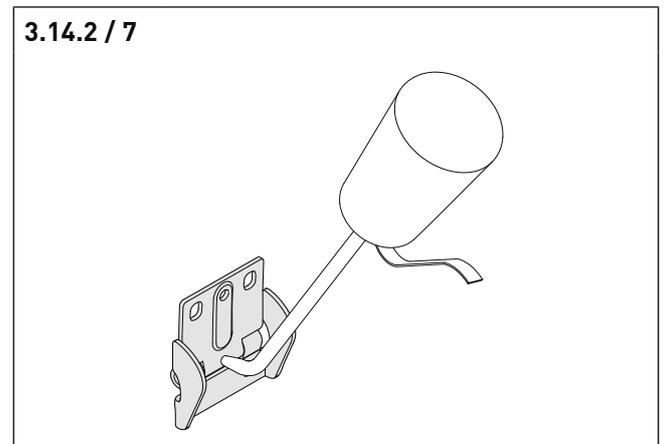

⇔ Oil the centre hinges.

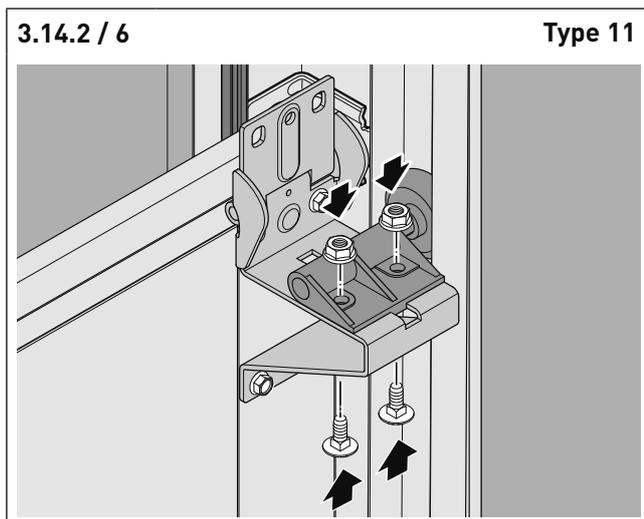

- ⇔ Slide the track roller into the guide rail.
- ⇔ Fasten the roller bracket together with the side hinge.
- ⇔ Adjust the track rollers.

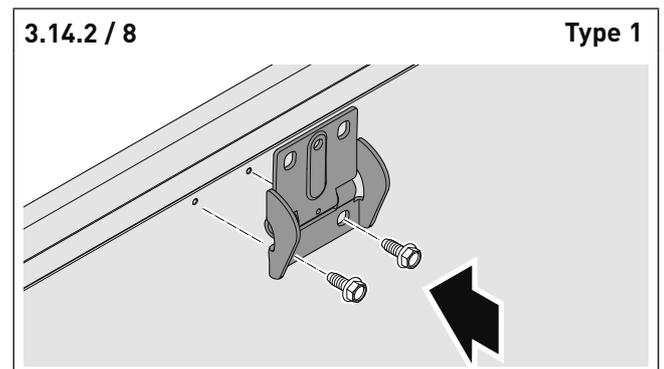


- ⇔ Screw the centre hinges on the lower section.
- ⇔ Observe the position of the hinge.
- 📄 "3.14.2 / 2"

**⚠ WARNING!**

The sections can be tilted into the room as long as they are not fastened to the previous section and the track roller brackets are not mounted.

**3.14.2 / 9**

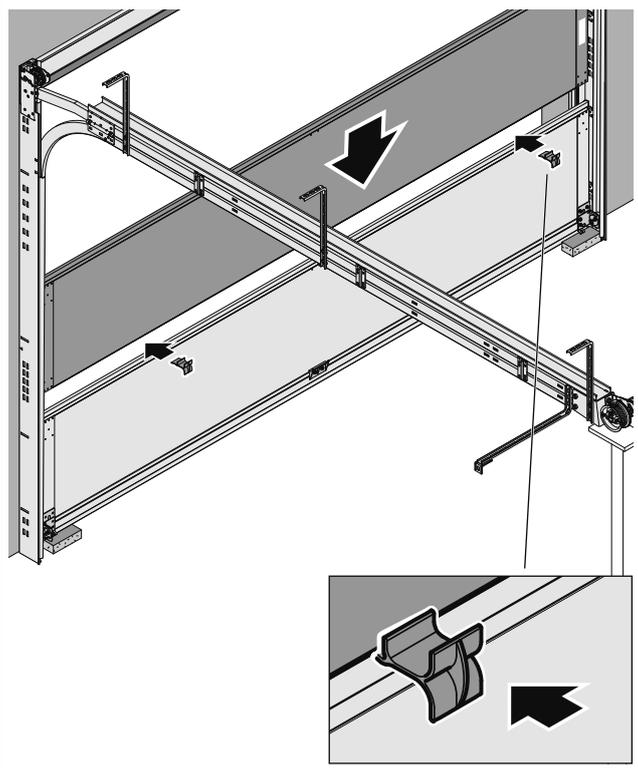

⇨ Screw the sections that you place in the opening.

⇨ Position the section with the type plate on the bottom section.

⇨ Insert the red spacers between the sections.

The spacers must be removed after the sections are fastened. The spacers must be inserted between the sections before each additional screw connection.


**Manually operated doors:**

⇨ Now mount the handle group.

The installation instructions are provided in the handle group package.

**3.14.2 / 10**


**Type 1**

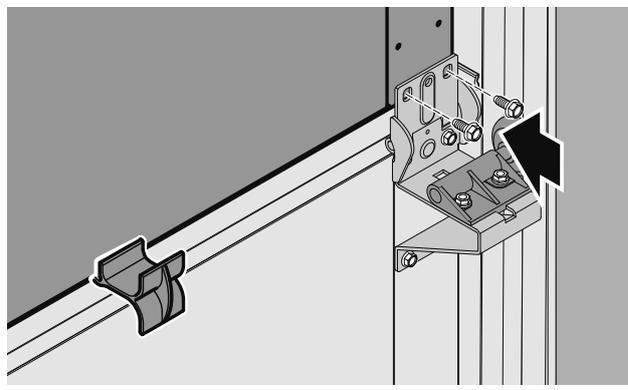

⇨ Screw the track roller bracket on the upper section.


**3.14.2 / 11**

**Type 1**

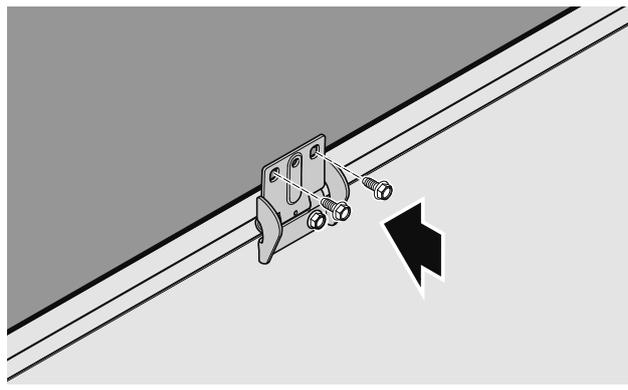

⇨ Screw the centre hinges on the upper section.

3.14.2 / 12

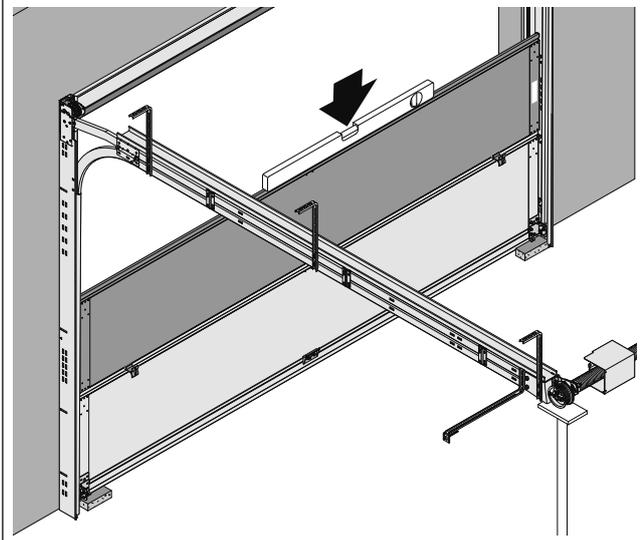


↔ Check whether the door is aligned horizontally. You can adjust the height with wooden shims in order to align the door horizontally (refer to Fig. "3.14.1 / 10" and "3.14.1 / 11").

↔ Mount all other sections up to the top (top section sticker), as described before (Fig. "3.14.2 / 1" to "3.14.2 / 12").

📄 Assembly of the upper section is described below.


3.14.3 Upper section (top section) assembly

3.14.3 / 1

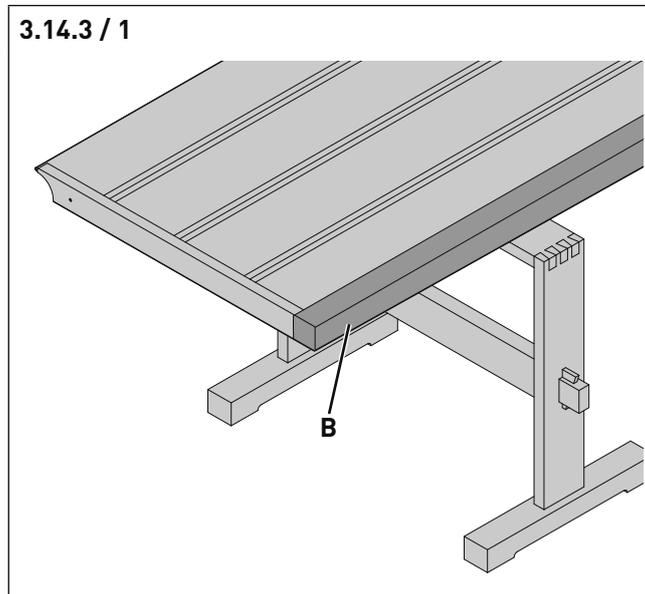

In special cases, the top section is completed with an aluminium profile (B).

3.14.3 / 2

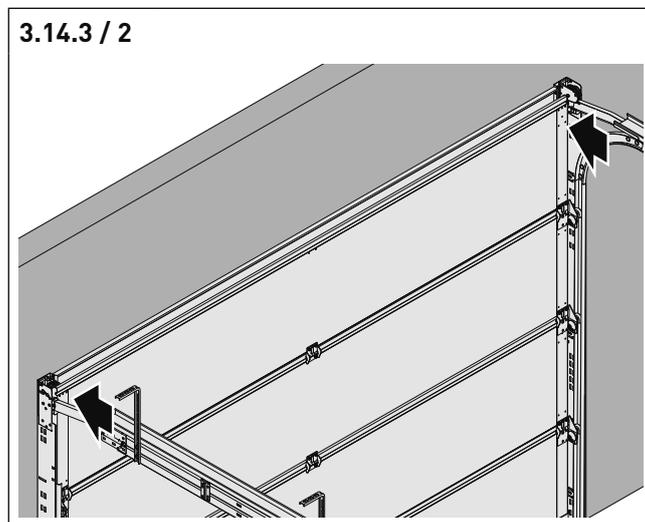


↔ Position the top section of the previous section and fasten it as described above (refer to Fig. "3.14.2 / 3" to "3.14.2 / 12").

**NOTE!**

The holding brackets for the top roller holders must be connected flush with the outside of the upper door section.

3.14.3 / 3

Type 1

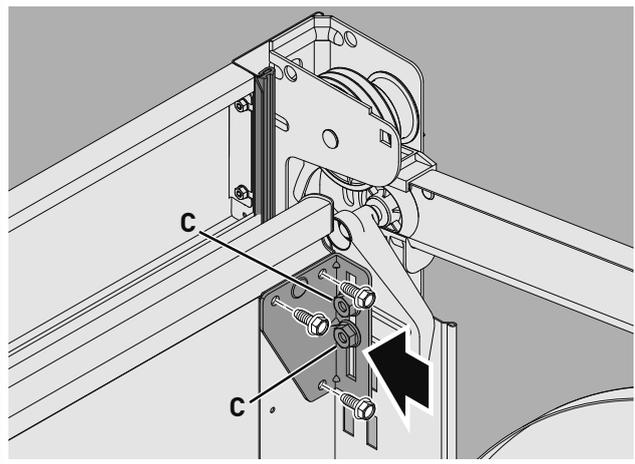


- ⇨ Loosen the screws (C).
- ⇨ Insert the roller of the top roller holder into the black plastic curved rail.
- ⇨ Screw the left and right holding brackets for the top roller holder onto the upper door section.

**Lintel variant 240 mm**


For the special case of the 240 mm lintel variant, the lower hole pattern must be used for installing the holding bracket (long) of the top roller holder.

3.14.3 / 4

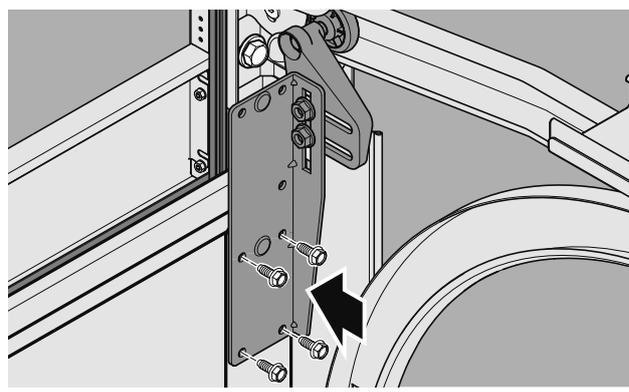

**Track roller alignment**

3.14.3 / 5

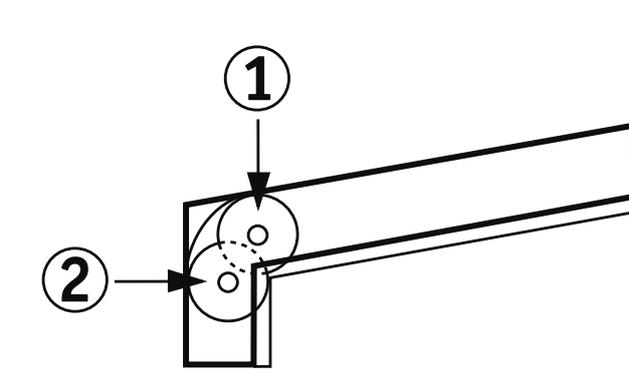

⇨ Align the track roller in the upper curved rail as follows:

**Position 1**


Roller at TOP in the curved rail:

- For doors **with** drive and without special brackets


**Position 2**

The roller barely engages behind the vertical curved rail section:


- For doors **without** drive (manual operation)
- For **all** doors with the 240 mm lintel variant

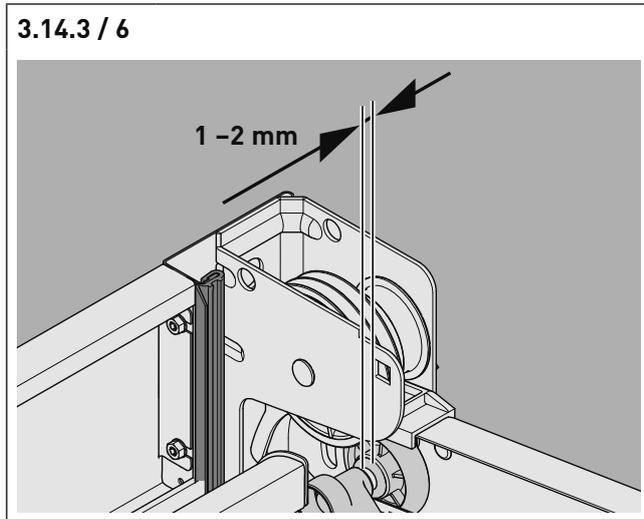

⇒ Make sure that the distance between the roller and the top roller holder is 1 mm to 2 mm during the entire door movement.

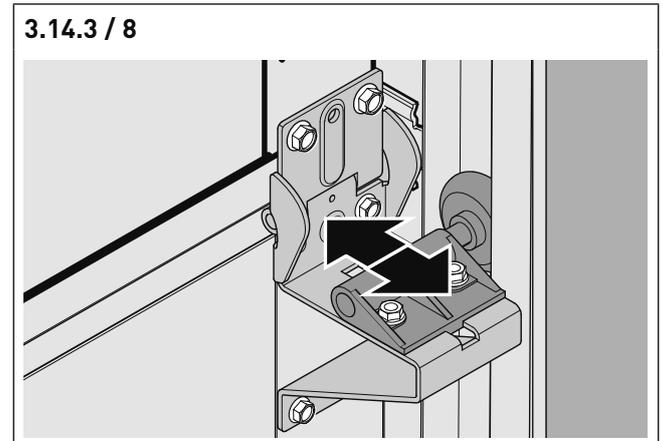

- ⇒ Shift the plastic roller bracket until the track roller is adjusted correctly.
- ⇒ Re-tighten the M6 nuts.

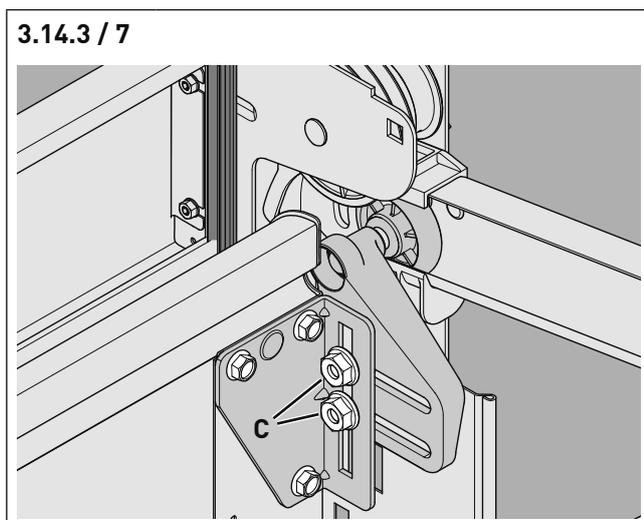


⇒ When you have adjusted the correct position for door, tighten the screws (C).

**NOTE!**


- The roller holder and the top roller holder must be aligned only while the door is closed.
- The securing screws must not be overtightened.
- **Do not** trap the sealing lips on the frame seal between the panel and the frame.

⇒ Align all roller brackets so that the rollers are in the track rail radius.


### 3.15 Installing the cable pulls on the door leaf

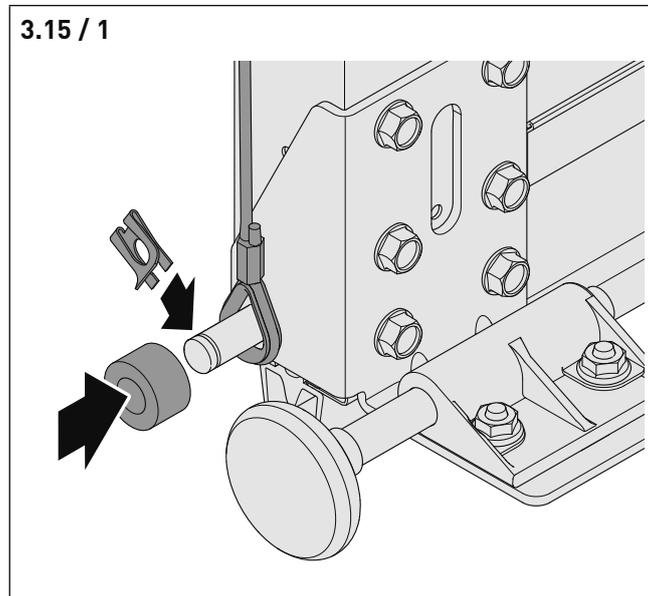


- The grommet with the cable must be installed between the door leaf and the spacer.
- ⇨ Hang the grommet with the cable into the floor bracket.
- ⇨ Fasten the cable with the spacer and SL clip.

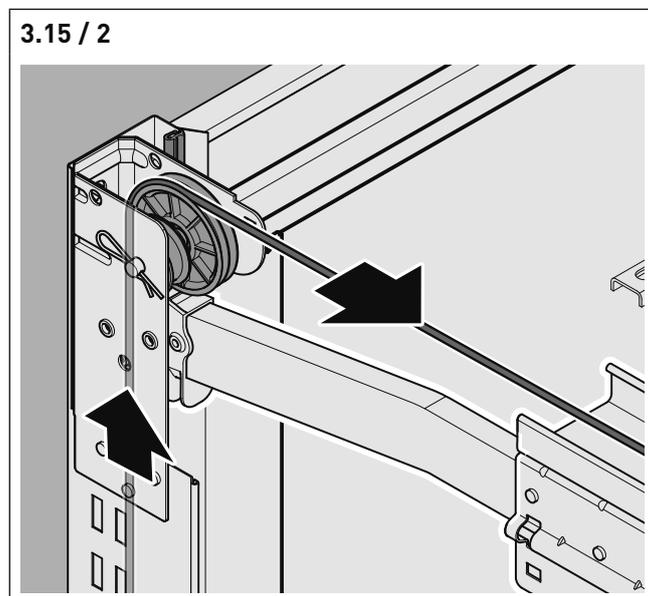

- ⇨ Guide the cable over the pulley and through the spring channel to the cable spool.

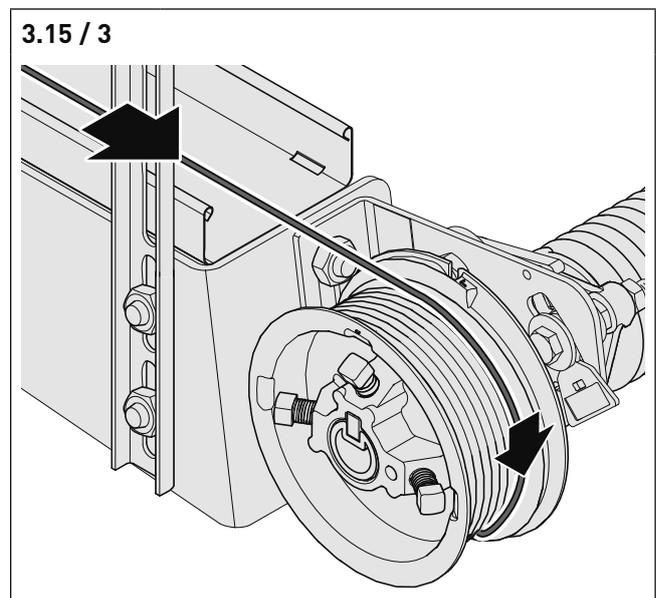


- ⇨ Guide the cable around the cable spool.

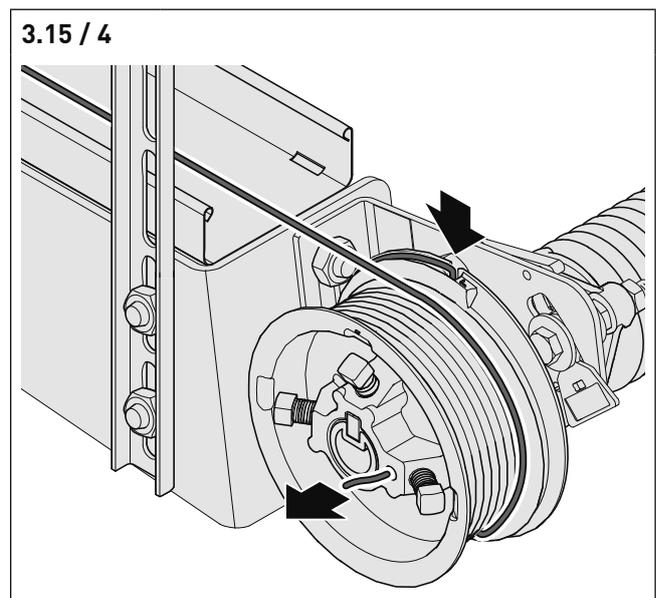


- ⇨ Guide the cable from behind through the cable spool.

**3.15 / 5**

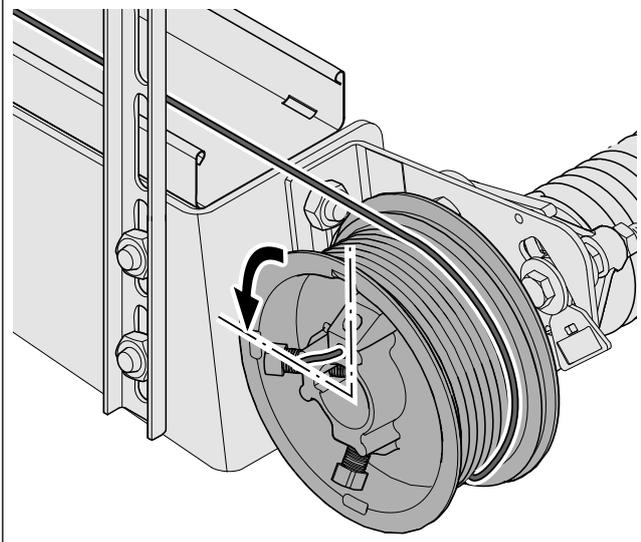

⇒ Turn the cable spool far enough that there is a 3/4 safety winding on the cable spool.


**3.15 / 6**

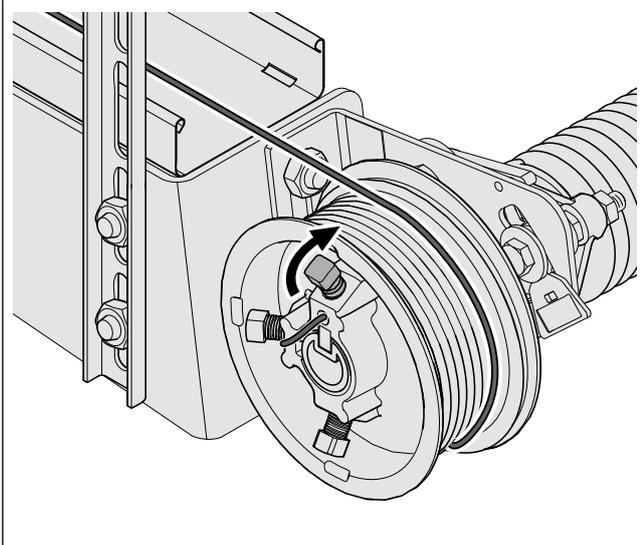

⇒ Pull the cable tight.  
 ⇒ Fasten the cable with the screw.

**3.16 Tension springs**


**3.16 / 1**

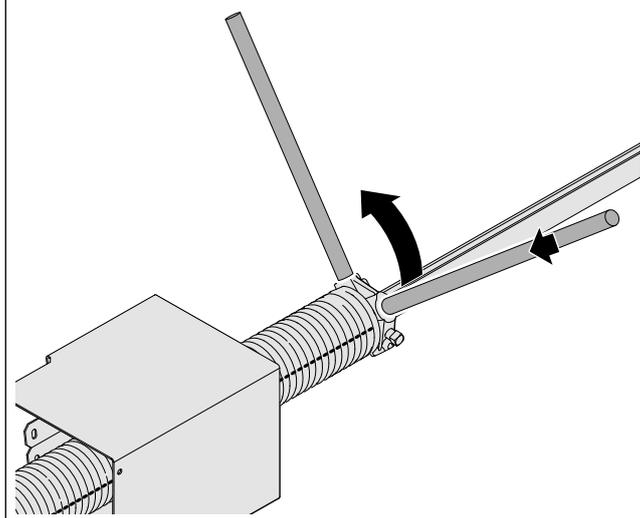

The correct spring tension depends on the size and weight of the door.  
 The type plate displays the number of turns for correct spring tension.  
 The model plate is on the inside left of the second door section.

⇒ Turn the spring 360° as often as specified on the type plate.


**3.16 / 2**

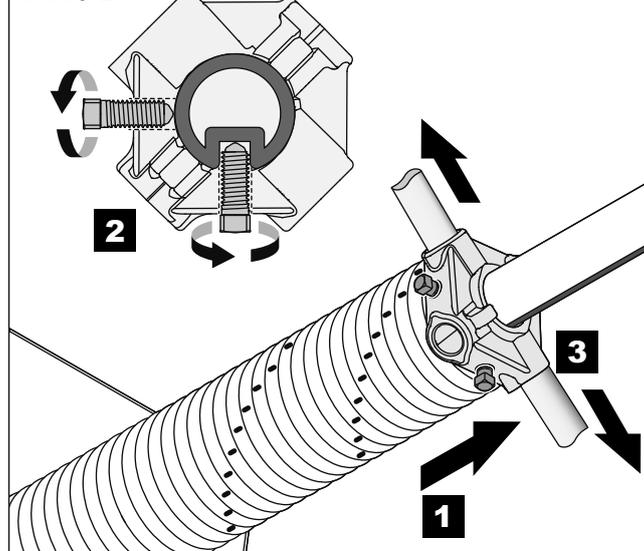

⇒ Stretch the spring 20 – 30 mm apart **(1)**.

⇒ Tighten the screws (18 Nm–20 Nm) **(2)**.

⇒ Remove the tensioning bars **(3)**.

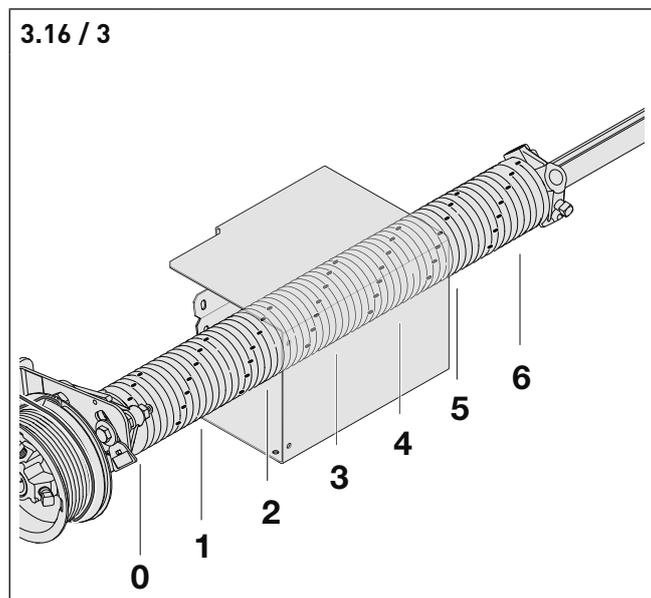


☑ The correct number of turns can be read via the elongated line on the spring. The example here shows a door whose spring has been turned 6 times.

↔ Tension the springs correctly on the opposite side.

**Note:**


The spring tension decreases during the course of initial door usage (depending on the door leaf weight and the type of fitting). Check the springs approx. 8 - 12 weeks after initial start-up and, if necessary, re-tension them.

**3.17 Test door travel**

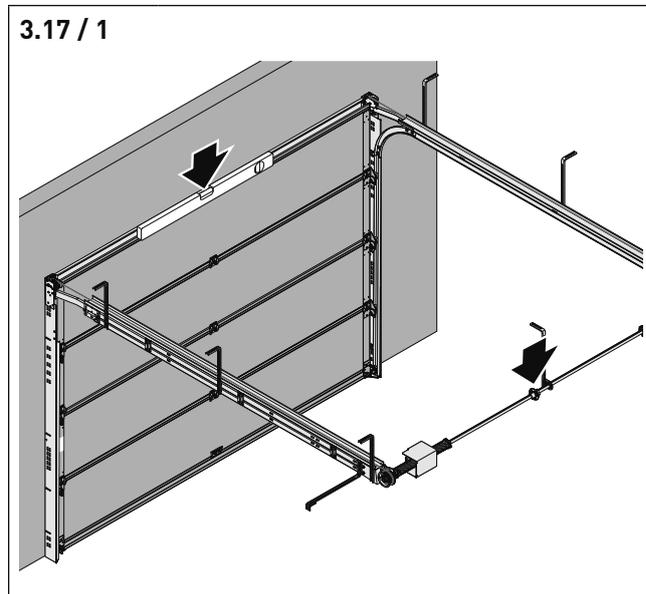

☑ The door leaf must be in a horizontal position when it is almost (not yet completely) closed.

■ If the door leaf is not in a horizontal position, an adjustment can be made via the shaft coupling on the spring shaft.

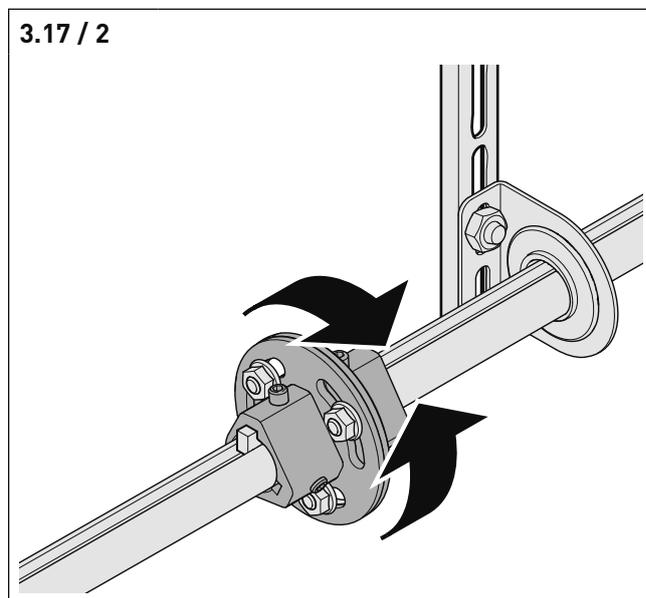


↔ Level the door leaf by turning the shaft coupling.

↔ Tighten the flange screw joint (18 Nm to 20 Nm).

**NOTE!**

To prevent damage to the door, open the door carefully and slowly.


**3.17 / 3**

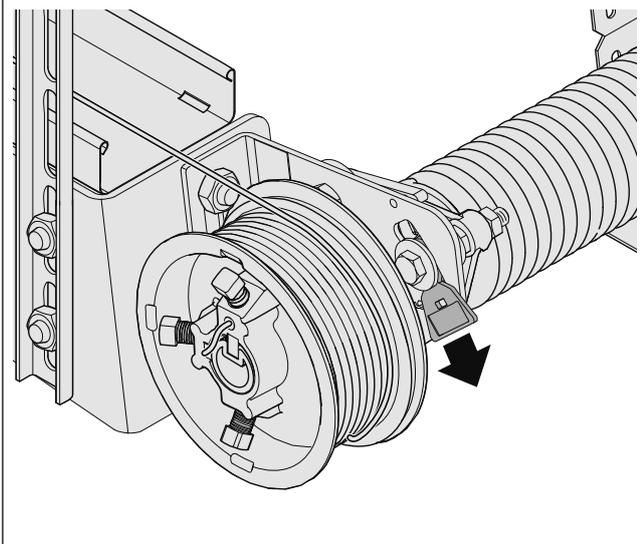

⇨ Remove the red plastic locking piece from the spring breakage guard.

**3.17 / 4**


**Type 14**

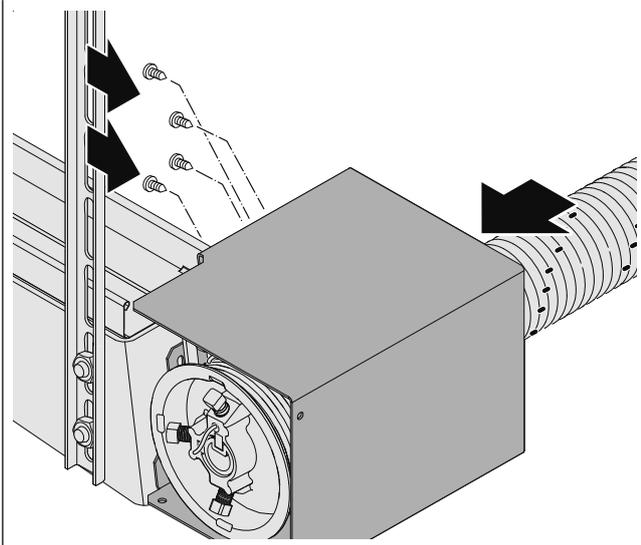

⇨ Position the left and right grasp guards.  
 ⇨ Use four sheet-metal screws to screw the grasp guard to the angle bracket.


**3.17 / 5**

**Type 14**

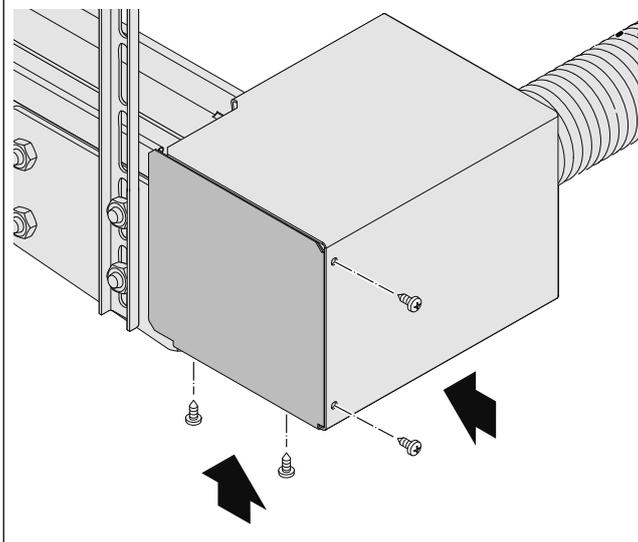

⇨ Lock the left and right grasp guards with the grasp guard's side plates.

### 3.18 Door carrier assembly

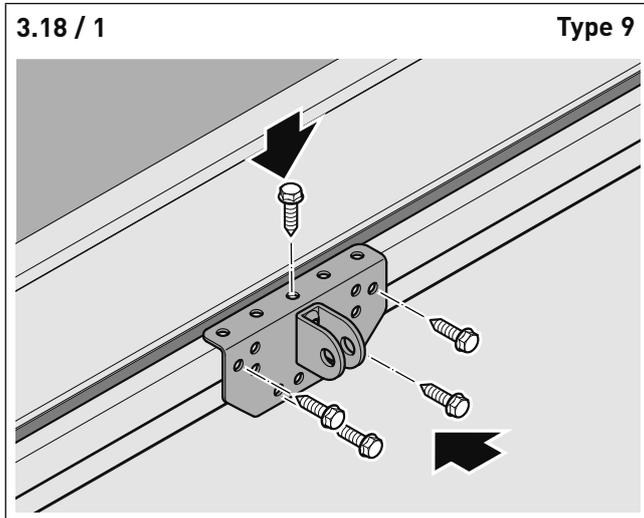

⇨ Mount the door carrier in the centre of the upper door section.

The door carrier should be fastened even if a drive is not mounted currently. The door carrier is specially designed for this sectional door and should also be used for retrofit drive assembly.

## 4. Commissioning


### 4.1 Safety instructions for commissioning

#### **WARNING!**

To prevent personal injury, make sure the door is secured.

- Have all installation steps been completed?
- Are the side guide rails fixed adequately?
- Are the springs tensed as described?
- Are the door sections fastened at all intended positions and has the 2 mm gap between sections been observed?

### 4.2 Testing the door operation

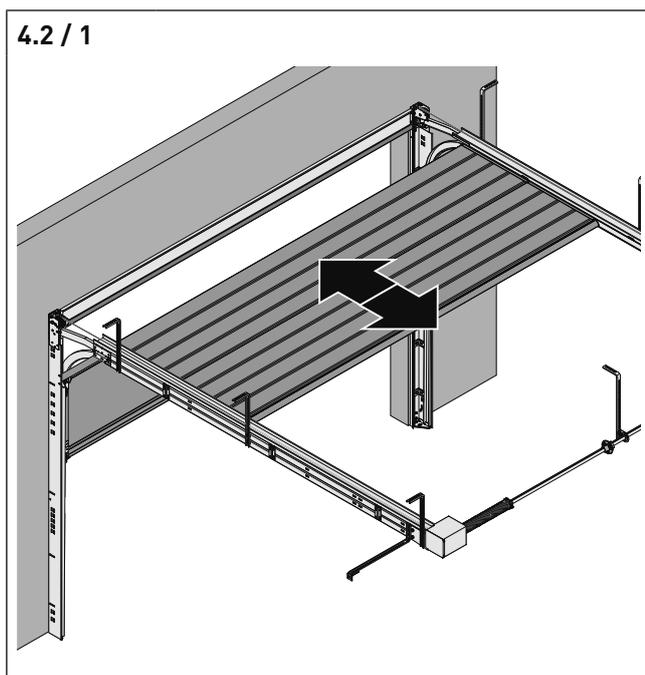

↔ Open and close the door manually.

**A successful test run must fulfil the following conditions:**

#### 1. The door must move easily.

- ↔ If the door cannot be moved easily, check:
- Are the side frames aligned correctly (refer to section 3.7)?
  - Have the ropes twisted (refer to section 3.15)?
  - Are the side guide rails aligned horizontally (refer to section 3.13.1)?
  - Is the door leaf centred in the door opening (refer to section 3.14.2)?
  - Is the door leaf in a horizontal position when closed (refer to section 3.14.2)?

#### 2. The door moves to the “Door open” and “Door closed” end positions.

- ↔ If the door is not move to the end position “Door open”, check:
- Is there an obstacle blocking the path of the door? Check the guide rails, in particular.
  - Does the rope run correct on the deflection pulleys on both sides (refer to section 3.15)?
  - Is the spring tension correct (refer to section 3.16)?
  - The spring tension may be too low or too high.

#### 3. The door remains in the catch between the end positions.

- ↔ If the door does not remain in the catch, check:
- If the door moves forward, you must reduce spring tension (refer to section 3.16).
  - If the door closes further, you must increase spring tension (refer to section 3.16).

### 4.3 Remove protective film

#### **NOTE!**

The protective film on the outside of the sections must be removed, because it permanently adheres to the sections in heavy solar radiation!

- ↔ Remove the protective film on the outside of the sections.

## 5. Operation

### 5.1 Safety instructions for operation

#### **WARNING!**

In order to avoid personal injury due to uncontrolled door movements:

- ↔ Only open or close the door when the door opening is clear of obstruction.
  - ↔ Do not operate the door under heavy winds in order to ensure that control over the door is maintained.
- 

### 5.2 Manually operated doors

- ↔ Only operate the door with the controls provided for this purpose.
- ↔ Move the door at a constant speed until the limit positions are reached.
- ↔ When closing the door, ensure that the latch bolt engages.  
The door is automatically locked in the CLOSED limit position.

#### **Operation from outside - opening the door**

- ↔ Unlock the handle with the key.
- ↔ the handle clockwise, then lift the door a few centimetres.  
The door is unlocked.
- ↔ Slide the door to the OPEN limit position. The handle does not have to be turned in the process.

#### **Operation from outside - closing the door**

- ↔ Move the door to the CLOSED limit position.  
The lock engages automatically when the door is closed.

#### **Operation from inside - opening the door**

- ↔ Unlock the handle with the securing lever on the lock.
- ↔ the handle clockwise, then lift the door a few centimetres.  
The door is unlocked.
- ↔ Slide the door to the OPEN limit position. The handle does not have to be turned in the process.

#### **Operation from inside - closing the door**

- ↔ Move the door to the CLOSED limit position.  
The lock engages automatically when the door is closed.

### 5.3 Power-operated doors

#### **WARNING!**

In order to avoid personal injury due to uncontrolled door movements:

- ↔ that the control unit and handheld transmitter are not used by children or unauthorised persons.
  - ↔ Ensure that the handheld transmitter is not inadvertently actuated (e. g. in the pocket of your trousers).
- 

-  Refer to the documentation for the drive system for information about the operation of the door drive.

## 6. Cleaning

### Clean glass surfaces

#### NOTE!

In order to avoid damaging glass surfaces, glass cleaner must not be used (due to aggressive ingredients). Never use abrasive cleaners, scrapers, razor blades or scrapers, etc.

1. Flush with flowing water.
2. Clean with warm water, a small amount of mild plastic cleanser and clean, soft, lint-free rags.



### On installation:

**After the installation has been completed, clean and dry the door thoroughly inside and out with warm soapy water to remove any grease, dust and metal fragments from the door (these will discolour the door finish if left on the door).**

## Cleaning Your Door

The door should be washed with a car shampoo or similar, **every two months**, to prevent the build up of dirt, salt, grit and other corrosive substances. If the door is in an area prone to coastal corrosion from airborne salts, the door should be cleaned **monthly**. Furthermore, cleaning lifting gear with a cloth soaked in a light oil will help to protect your door from corrosion – it must be accepted that salt air is very aggressive and extra care is required.

No caustic, abrasive or corrosive chemicals and substances, flood water, water runoff, or runoff from lead, copper or galvanic metal flashing should be allowed to come into contact with the door. A jet wash must not be used to clean any part of the door.

Ash, cement, dust, animal waste, or foreign substances should be **removed immediately**. Do not apply excessive pressure when cleaning, doing so will affect the surface finish, leading a permanent change in its lustre. Failure to ensure the door is cleaned and maintained as described will invalidate the doors' warranty.

## 7. Service

### Maintenance

#### WARNING!

A damaged door can cause severe or deadly injuries. If there are signs of damage, fractures, or tears, the door must be immediately shut down and repaired by a qualified expert in accordance with EN 12635.

#### 7.1 Maintenance work by the owner

##### Maintenance at least every 12 months

- ⇒ Check the rollers.
- ⇒ Oil the hinges and track rollers.
- ⇒ Check the adjustments of the rollers.
- ⇒ Check the seating and fastening of all screws.
- ⇒ Visually inspect all components for cracks and damage.

#### 7.2 Maintenance work by qualified, trained specialist personnel (in accordance with EN 12635)

##### Maintenance at least every 6 months

- ⇒ Inspect the steel ropes for damage, fractures, and tears.

##### Maintenance at least every 12 months

- ⇒ Re-tighten the springs as necessary.
- ⇒ Check the springs.

## 8. Disassembly and disposal

### 8.1 Disassembly

#### **WARNING!**

##### **Life-threatening danger due to electric shock in door systems with a drive system!**

- ↔ Prior to disassembly, disconnect the drive system and control unit from the power supply.
  - ↔ Ensure that the power supply is disconnected during disassembly.
- 

#### **WARNING!**

##### **Severe injury possible due to falling parts!**

- ↔ Secure the door system to prevent falling prior to disassembly.
  - ↔ Observe all applicable occupational safety regulations.
- 

Disassembly must be carried out by qualified, trained personnel in the reverse order of the assembly described in this manual.

### 8.2 Disposal



#### **The door system must not be disposed of with the household waste!**

- ↔ Dispose of used equipment of the drive system in a collection centre for electronic scrap or with your specialist dealer.
- ↔ Dispose of the door system with the local waste disposal in accordance with locally applicable waste disposal regulations.

## 9. Annex

### 9.1 Warranty

**Wear parts have a limited service life due to the frequency of use and are not covered by the normal warranty!**

The following apply as wear parts:

- Springs
- Ropes
- Track rollers
- Seals
- Rope pulleys
- Drive system
- Locks / lock
- Bowden cables
- Hinges

**Warranty for function and security can only be recognised if:**

- safety and warning notices are observed,
- installation is carried out correctly and in the sequence of the manual,
- only original Teckentrup parts and accessories are used,
- no additional objects are fastened on the door,
- the components of the scope of delivery are not modified or converted,
- regular maintenance of the door is carried out,
- the owner is aware of all relevant operating instructions (door, drive system and safety equipment).

**Disregard of these installation and operating instructions voids the warranty.**

---

**Any questions?** We would be glad to help! Contact your Teckentrup consultant.

**Contact information:**

Teckentrup UK Limited  
Units 2-4 Opus 9 Industrial Estate  
Woburn Road, Winwick Quay  
Warrington  
WA2 8UE  
Tel: 01925 924050  
sales@teckentrup.co.uk • www.teckentrup.co.uk